

# Rocknustics®

ULTRA-FIDELITY OUTDOOR SPEAKERS



**CHERRY BOMB** | OWNER'S MANUAL

# CHERRY BOMB | OWNER'S MANUAL

 
 
Thank you for purchasing your CB5 landscape speaker from Rockustics. Cherry Bomb's patented three-way design includes a 5" double-chamber, band-pass subwoofer, a 4" woofer and a .75" tweeter all in one. When properly installed, these speakers will provide years of listening enjoyment. If you have any questions that are not answered in the following directions, please contact your local sound contractor or email [techsupport@mseaudio.com](mailto:techsupport@mseaudio.com).

## Site Preparation

There are several factors to consider when choosing mounting locations for your CB5 landscape speaker:

- The speakers are designed to be partially buried in the ground, but the CB5 unit can also be installed by simply sitting on its base above ground, without being buried.
- The CB5 speaker is a full-range system with integrated subwoofer. Plan the speaker locations to provide even audio coverage and attempt to keep an even distance between each of the CB5 speakers.
- It is preferred to place the CB5 speakers around, or near the perimeter of the listening area where the audio is intended to be heard.
- There should be a direct line of sight from the speaker to the listening area.
- Position each speaker so they are all approximately the same distance away from the listening area.
- Do not place the speakers in areas that are prone to flooding with standing water.
- The speakers should not be positioned directly in front of, or in direct spray from, sprinklers.
- Do not aim the top speaker at more than 45° from horizontal to keep the unit from collecting water on the cone.

We cannot anticipate or accommodate every possible installation configuration. Trial and error methods may have to be employed to achieve acceptable audio dispersion. Included are some typical installation layouts for your reference.

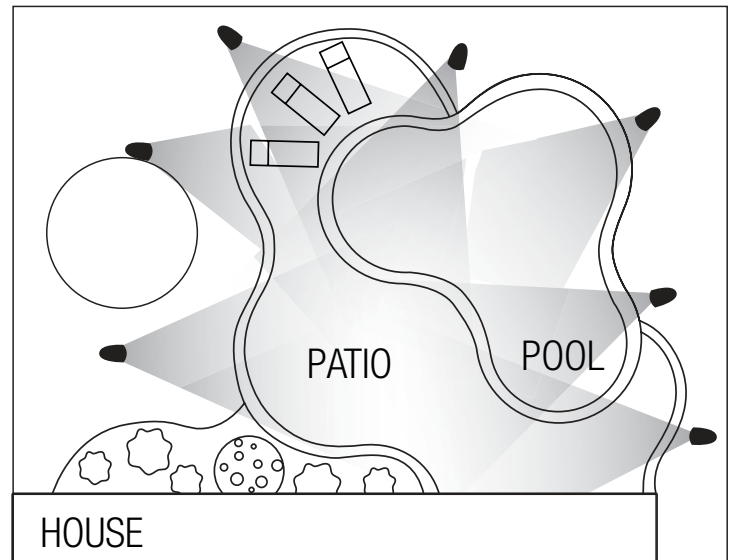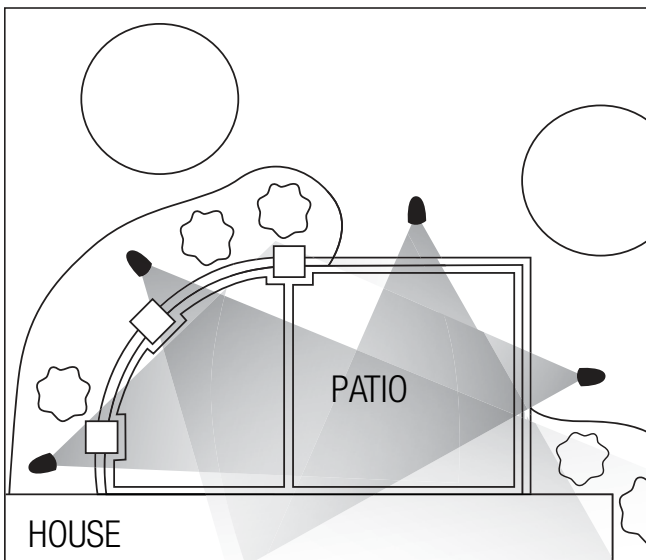

## What's Included

 
Cherry Bomb - 1

Wire Nuts - 2

Hex Key - 1


## Wiring Diagram

The CB5 speakers run in an 4 ohm direct mode. The speaker comes with hard wire leads. See the figures below for a typical 4 Ohm wiring configurations.

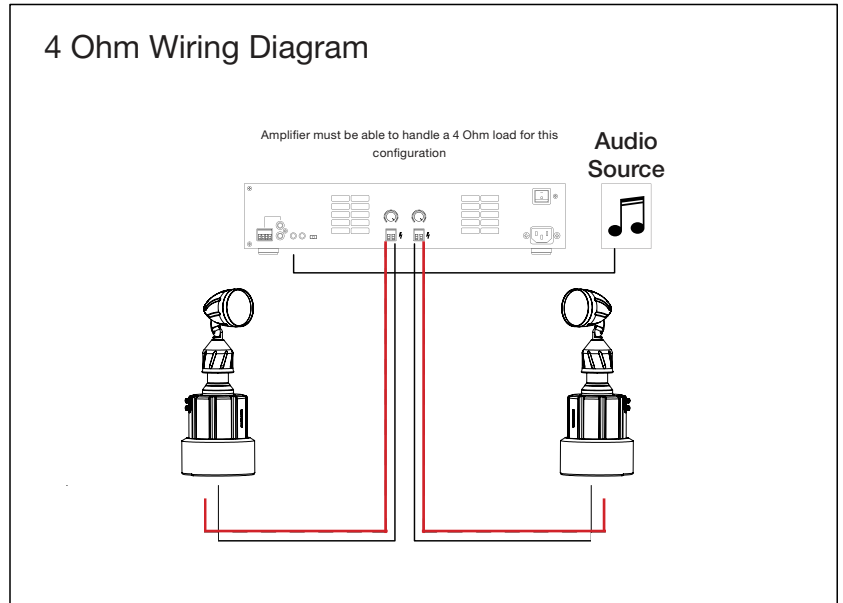


## Speaker Installation

 Rockustics recommends using either 14 gauge or 16 gauge direct-burial wire. It is best to lay out the wire to each of the intended speaker locations before installing the speakers.

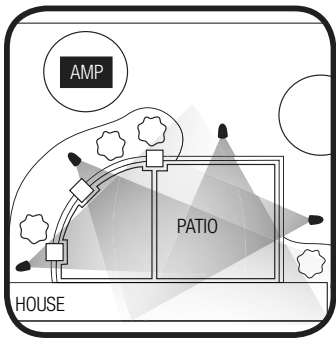


### 1. Layout Design

 Determine the layout of your system. Place each speaker in the general location it will be installed. Also place your amplifier where it will be installed.

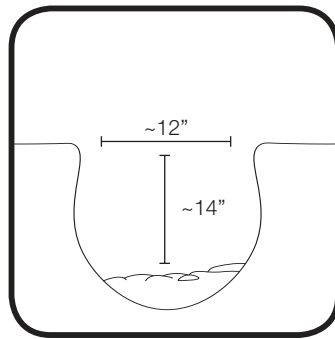


### 2. Digging

 Dig a hole sufficient to bury the speaker(s) to the correct depth (noted above) and to also accommodate 4-6" of gravel or crushed rock under the speaker housing.

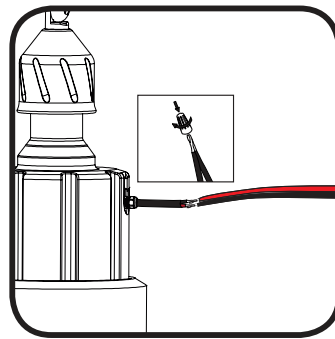

### 3. 4 Ohm Wiring

 For 4 ohm operation, locate the set of wires. This will be a red and black wire. Using the supplied wire nuts, connect the positive lead from the amplifier to the red wire and connect the negative lead from the amplifier to the black wire.

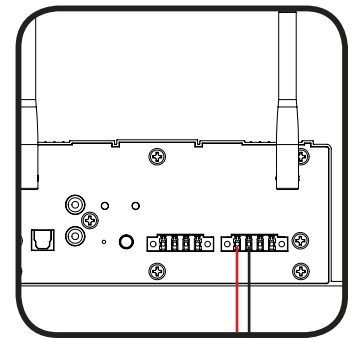


### 4. Connecting to Amp

Wire the Cherry Bomb speaker to your amp. (Read your amp's instructions on how to properly connect a speaker to your amp).




### 5. Test

 Fully wire the rest of your system and test to make sure sound is coming from each unit.

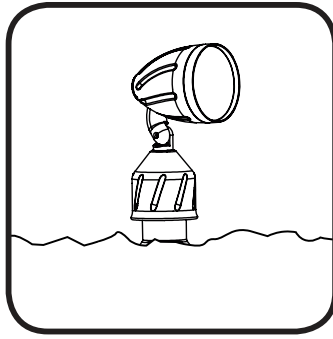


### 6. Bury Speakers

 Place your speakers in each hole, and begin filling back up. Be sure the speaker is deep enough in the ground that the wire(s) can be buried at least 2" below the final landscaping grade. Pack down the dirt.

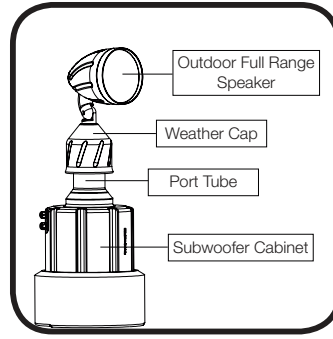

### 7. Port Tube

 **IMPORTANT:** Remember to **NOT** cover the port with dirt so your speaker can function properly. The included weather cap not only serves as a mount for the full-range speaker, but also prevents the elements, like water, from entering the port tube. See diagram above for the port tube location.

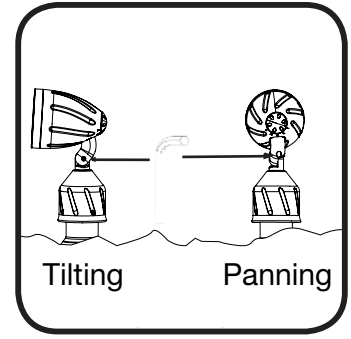

### 8. Fine-Tune Aiming

Angle the speakers in your desired position with the allen wrench.

## Limited Warranty:

Rockustics warrants its loudspeakers to be free from defects in material and workmanship for a period of ten (10) years for speaker product and three (3) years for the electronic components to the original purchaser. Purchase must be made from an authorized Rockustics dealer.

This warranty does not cover service or parts to repair damage caused by misuse, abuse, damage while in transit, alterations, unauthorized repairs, failure to follow instructions, fire, flood, or any other cause beyond the reasonable control of Rockustics. Defects in speaker cabinets or grilles must be brought to the attention of your dealer immediately after purchase. This warranty will be void if the products' serial number has been altered or removed.

Should your Rockustics product require service, please call the MSE Audio customer service department for a return authorization. All merchandise returned to Rockustics without prior authorization will be refused. For your return authorization number, please call 913.663.5600 or email [sales@mseaudio.com](mailto:sales@mseaudio.com)