

# Rockustics®

ULTRA-FIDELITY OUTDOOR SPEAKERS

SWEETSPOT™  
SPEAKERS

OWNER'S  
MANUAL



# SWEETSPOT SERIES | OWNER'S MANUAL

Please read the following instructions carefully before installing your Rockustics® SweetSpot speaker. If you have any questions regarding installation that are not answered in the following directions, please contact your local sound contractor or the Rockustics®/MSE Audio® technical support team. Contact information can be found on the back of the manual.

Rockustics Sweetspot are designed to combine a stereo signal (left and right channel) into a single speaker to provide a full audio experience from one speaker. The Sweetspot Rock and Omniplanter speakers are equipped with dual voice coil woofers and dual tweeters so they can merge left and right signal inputs into great sounding audio from a single unit. Sweetspot models are ideal for places where there is not enough room for stereo speakers - or where it is impractical to use stereo speakers due to the installation constraints.

## Basic Wiring

- 1) Locate the speaker wires on the underside of the speaker. If necessary, strip and trim the wire ends.
- 2) Connect the two speaker wire channels to the input signal wire ([Diagram A](#)):  
Channel 1: Red = positive, Black = ground  
Channel 2: Blue = positive, Brown = ground
- 3) Use the supplied silicone wire nut to connect the leads. Rockustics recommends using 14ga or heavier Direct Burial cable for the connection between the amplifier and the speakers.

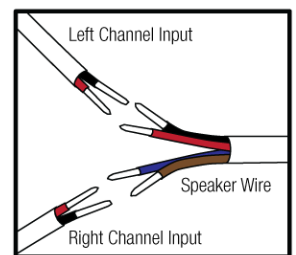 


Diagram A

**NOTE:** The provided wire nuts are meant for permanent installation use only. If you are temporarily wiring the speakers, do not use these wire nuts. In the event you have used the wire nuts, and need to re-wire your system, do not attempt to unscrew the nuts. Instead, clip the wires below the nut, and follow the steps in the [Basic Wiring](#) section with a new pair of waterproof wire nuts (these are available at most hardware stores).

## Planter Set Up

([Diagram B](#)) Fill planter with pea-gravel to approximately 2" above the black insert box to ensure proper drainage. Gently rock the planter from side to side so that gravel fills in the gaps, providing ample coverage of the black insert box. After filling with pea-gravel, top with soil, and continue planting as you would any normal planter. Be sure to use the proper amount of pea-gravel and soil to fill the planter; the soil and gravel are important to the acoustic properties of the planter and assist with the proper bass reproduction.

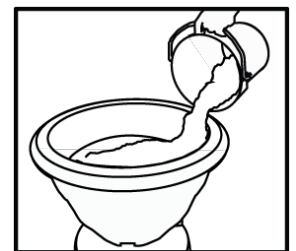 


Diagram B

## Optimizing Speaker Placement for Best Sound

 
All Rockustics speakers can generate a high SPL (sound pressure level). Be ready to rock, but be considerate of your neighbors! Maximum acoustic performance should be an important factor in determining speaker placement. Here is how to achieve it:

- 1) Establish where the most likely or average listening position will be.
- 2) The speakers should be placed at or close to the same distance from that point.
- 3) The actual distance between the listening position and the location of the speakers is not critical. However, keep in mind that as the distance between listening area and speaker is increased, there will be a noticeable decrease in perceived volume.
- 4) Be sure to confirm amp power matches the power rating on the speaker. Over-driving the speaker can lead to permanent damage that is not covered under warranty.

Audio coverage patterns vary depending on the type of speaker ([Diagram C](#)):

Sweetspot [Rock](#) models are more directional and are ideal for use where directional audio is desired. These models are better suited along the boundary of your listening area or to cover specific areas with sound.

Sweetspot [Omniplanter](#) models provide omnidirectional coverage and are better suited for full 360 degree audio. Use these models on the interior of your listening area where coverage is required all around the speaker.

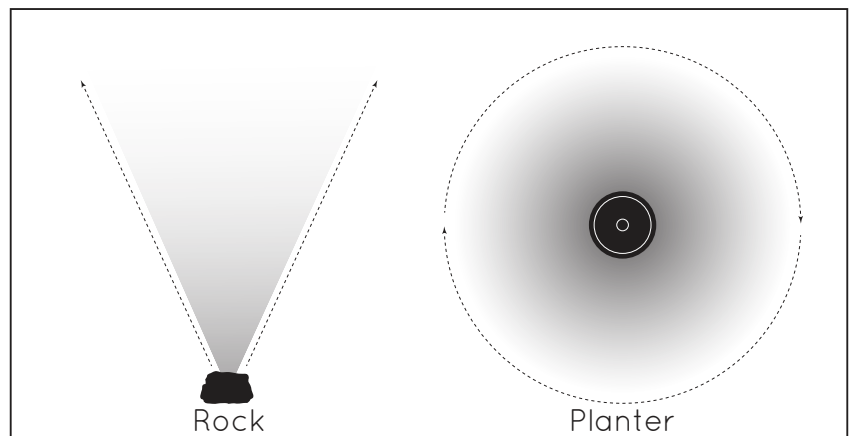

[Diagram C](#)

## Cautions and Maintenance

All Rockustics speakers are sealed and fully weatherproof. However, DO NOT place speakers where the speaker will be in the path of a sprinkler system. Sprinklers typically have a high water pressure level that can damage speaker cones if hit directly.

DO NOT place soil or wood chips between the planter urn and base where the speaker grille is located, or over/in the rock speaker grille. If the grilles accumulate a build up of soil, the speaker may become damaged. Accumulated soil may also promote undesired insect traffic into the speaker. Insects may eat through the speaker surround. Chemical sprays may also cause damage to the rubber of the speaker surround. This includes bug spray, deck sealant, some fertilizers and oil based products. Speakers MUST be covered when applying these treatments or chemicals in your yard.

For environments that get snow and ice during the winter months, be sure to check that the openings and woofer cone are clear and there is no hard-packed snow or ice built up in these areas before playing. If there is ice or snow present on the cone, use a hair dryer set on a low setting to melt it away. If the speakers are not going to be used during winter months, it is recommended that they either be disconnected and brought indoors, or covered with a plastic bag to help protect the speaker components.

## Applicable Models

Pavarocci™ SweetSpot

OmniPlanter™ 6.5 SweetSpot

OmniPlanter™ 8.0 SweetSpot

SquareRoot™ 6.5 SweetSpot

SquareRoot™ 8.0 SweetSpot