

TIAMOND SERIES

Portable Outdoor Gas Grill Quick Start Guide

IMPORTANT: You must read the installation and owner's manual provided with the grill.

INSTALLER: Leave these instructions with consumer. **CONSUMER:** Retain for future reference.

1-Safety

CAUTION: WHEN INSTALLING AND OPERATING THIS APPLIANCE, ALL INSTRUCTIONS AND WARNINGS IN YOUR OWNER'S MANUAL MUST BE OBSERVED. FAILURE TO DO SO MAY RESULT IN A FIRE OR EXPLOSION CAUSING PROPERTY DAMAGE, BODILY INJURY, OR DEATH.

This grill must be installed in accordance with local codes and ordinances, or, in the absence of local codes, with either the latest National Fuel Gas Code (ANSI Z223.1/NFPA 54), and Natural Gas and Propane Storage and Handling Installation Code (CSA-B149.1).

This appliance and its individual shutoff valves must be disconnected from the gas-supply piping system when testing the system at pressures in excess of ½ psig. This appliance must be isolated from the gas-supply piping system by closing its dedicated manual shutoff valve during any pressure testing of the gas-supply system at pressures up to and including ½ psig.

This unit is designed for outdoor use only. DO NOT use this unit inside a building, garage, or enclosed area (see paragraph below). DO NOT use this unit in or on a recreational vehicle or boat.

A minimum 5 foot clearance is required between the cooking surface and the overhead construction. When installed under combustible overhead construction, the area above the cooking surface of the grill must be covered with an exhaust hood. The exhaust hood provides the protection for the combustible overhead construction. **DO NOT** use this appliance under unprotected combustible overhead construction. When installed under overhead non-combustible construction, an exhaust hood is highly recommended. When using an exhaust hood: the area above the cooking surface of the grill must be covered with a hood larger than the cooking area of the grill, and with a minimum of 1200 CFM (cubic feet per minute) for proper outdoor application.

Installation must be performed by a qualified professional service technician.


2-Unpacking

Carefully unpack the unit, removing all packing material and protective film (including the clear film on the drip tray). Verify that all parts have arrived undamaged by consulting the parts list in the owner's manual. Remove foam packed hardware from oven area. (See Fig. 2-1.)

Consult the parts list in the owner's manual. If any parts are missing or damaged, immediately contact the Fire Magic dealer before beginning installation.

Important: The 2 shipping screws must be removed prior to removing the unit from the wooden pallet. The screw located on the bottom left side of the unit is accessed by opening the door. The screw located on the bottom right side of the unit is accessed by removing the lower drawer.

> To remove the drawer; pull it completely out. Release the drawer from the drawer slides by pressing the black lever down on the right side, and up on the left side.

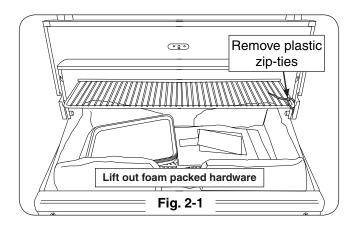

3-Installation

Location

Locate the unit on a flat level surface. Refer to the INSTALLATION REQUIREMENTS section of your grill owner's manual for complete details.

CAUTION: Wind blowing into or across the rear oven lid vent (Fig.

3-2) can cause poor performance and/or dangerous overheating. Orient the grill so that the prevailing wind

a minimum clearance of 4" from any non-combustible wall.

blows toward the front of the grill (Fig. 3-1).

CAUTION: To prevent dangerous overheating, the rear of the unit must have

CORRECT PLACE GRILL SO PREVAILING WIND **BLOWS TOWARD FRONT OF GRILL** Fig. 3-1



Brass Acme

indicator (optional)

Hand nut with

(1" front air inlet)

Fig. 3-5

Connect Gas supply

These quick start instructions assume a propane cylinder configured unit. See main instructions for natural gas or household propane configured units.

Place approved propane 20 lb cylinder in tank tray and lock holder in position (Fig. 3-3).

Connect coupler hose and regulator supplied with unit to propane cylinder (Fig. 3-4).

Turn all burner control knobs to the OFF position. Open the main cylinder valve. Then carefully check all gas connections for leaks with a brush and half-soap/half-water solution before lighting. NEVER USE A MATCH OR OPEN FLAME TO TEST FOR LEAKS.

Proper airflow (front-to-back) must be maintained as shown in Fig. 3-5.

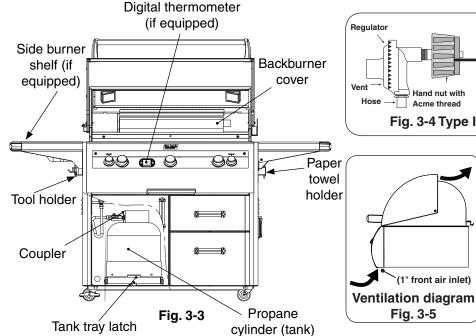


Fig. 3-4 Type I Acme thread coupler To connect the regulator/ hose assembly to the propane-gas cylinder valve fitting: Press the hand nut on the regulator over the Acme thread fitting on the cylinder valve. Turn the hand nut clockwise to

engage the threads and

tighten until snug.

Type 1 valve

L-C2-336 **REV 7 -** 1912051520

4-Grill Setup

Parts Placement Checklist

Place the following items according to their position and orientation in Fig. 4-1:

Flavor grids, cooking grids, backburner cover, drip tray, and meat probe, charcoal / smoker basket, and shelf/side burner as applicable.

Leave pre-installed E-burners in place to maintain proper alignment.

Flavor Grids

The short grids are designed to fit over the outer burners and the tall grid(s) over the inner burner(s). Align the cutouts on the grids to the lighting tubes and place the grids onto the front and rear grid rests.

Cooking Grids

Place the cooking grids using the grid lifter.

Backburner Cover(s)

Hook the backburner cover(s) over the top of the backburner(s) to protect when it is not in use. Remove cover(s) before use.

Drip Trav(s)

Place a liner into the drip tray(s) and insert into the bottom front of the control panel opening(s).

Meat Probe (if equipped)

Connect the meat probe to the right side of the control panel for temperature readings on the digital thermometer (if equipped).


Charcoal / Smoker Basket

The basket is for use directly above a <u>main burner</u>. Consult the owner's manual for complete installation and operation.


Shelf/Side burner (if equipped)

Align the four (4) holes in the shelf with the four (4) holes in the side of the cart while aligning and engaging the burner venturi with the orifice (Fig. 4-2). Insert the four (4) screws (provided) into the holes and tighten. Connect the spark wire to igniter electrode (Fig. 4-2). Open side burner lid, set cap on burner, and set grid into shelf.

IMPORTANT: See your grill owner's manual for complete installation details.

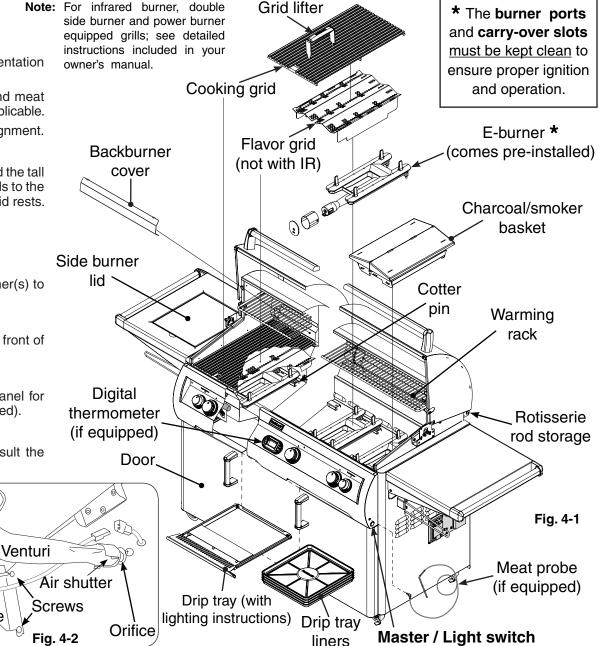

Replacement parts can be ordered from your local Fire Magic dealer.

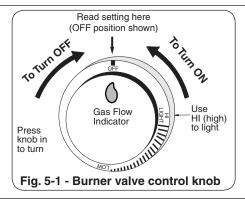

For your convenience and safety; when the control knob is turned to the ON position, the gas flow indicator will change from blue to red. (Red indicates gas flow.) See Fig. 5-1.

WHEN OPERATING THIS GAS
APPLIANCE, ALL INSTRUCTIONS
AND WARNINGS MUST BE
OBSERVED. FAILURE TO DO SO MAY
RESULT IN A FIRE OR EXPLOSION
CAUSING PROPERTY DAMAGE,
BODILY INJURY, OR DEATH.

‡ MASTER SWITCH (digital thermometer models)

The master switch (Fig. 5-2) controls the power to all lights, igniters, and the thermometer. It allows the power to be turned on or off for safety and convenience. The switch will need to be turned on prior to each grill use, and turned off after each use.

LIGHT SWITCH (analog models)

The light switch (Fig. 5-2) is push button operated, and is located on the right side of the control panel. It controls the power to all lights.

5-Test

laniter wire

Note: This unit must be connected to 120VAC power for electronic lighting.

- 1. Open lid(s) or remove cover(s) from burner(s) to be lit.
- 2. Turn all gas control knob(s) to their OFF position(s).
- 3. Turn on the gas at its source and if equipped, press the master switch.


Note: DO NOT turn on more than one valve at a time for either electronic or manual lighting.

Depress the desired control knob <u>for 5 seconds</u>. Ensure the igniter is glowing (inside of lighting tube), then, while pressing turn it counterclockwise to the **HI LIGHT** position. Once the burner lights, release the knob.

CAUTION:

If a burner does not light within five (5) seconds of turning on the control knob, depress the knob and turn it to the **OFF** position. **WAIT FIVE (5) MINUTES** before repeating step 4. If you smell gas, follow the instructions on the cover of the grill owner's manual. If the burners still do not light after several attempts, refer to the grill owner's manual for manual lighting.

5. Repeat step 4 for each additional burner to be lit.

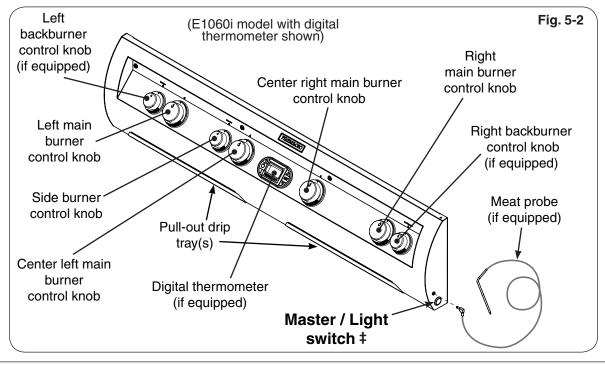

6-Propane and Natural Gas Safety

IMPORTANT: READ AND FOLLOW ALL WARNINGS PROVIDED WITH THE PROPANE-GAS CYLINDER.
READ ALL SAFETY INSTRUCTIONS AND WARNINGS REGARDING THE USE OF PROPANE GAS FOUND
INYOUR OWNER'S MANUAL. FOR NATURAL GAS READ ALL SAFETY INSTRUCTIONS AND WARNINGS
FOUND IN YOUR OWNER'S MANUAL.

7-Routine Maintenance

Your grill must be serviced and maintained properly to ensure optimal performance, appearance, and <u>safety</u>. Clean your grill <u>before and after each use</u>. Additionally, a deep clean of the entire grill and all its components be performed <u>twice a year</u> (or as needed depending on use). See owner's manual for details.

REV 7 - 1912051520 L-C2-336