


USE FILLER/ SPACER TO  
SET TRACK DISTANCE  
FROM END OF COPING

INSTALL TRACK USING A  
SPLICE AT EACH JOINT

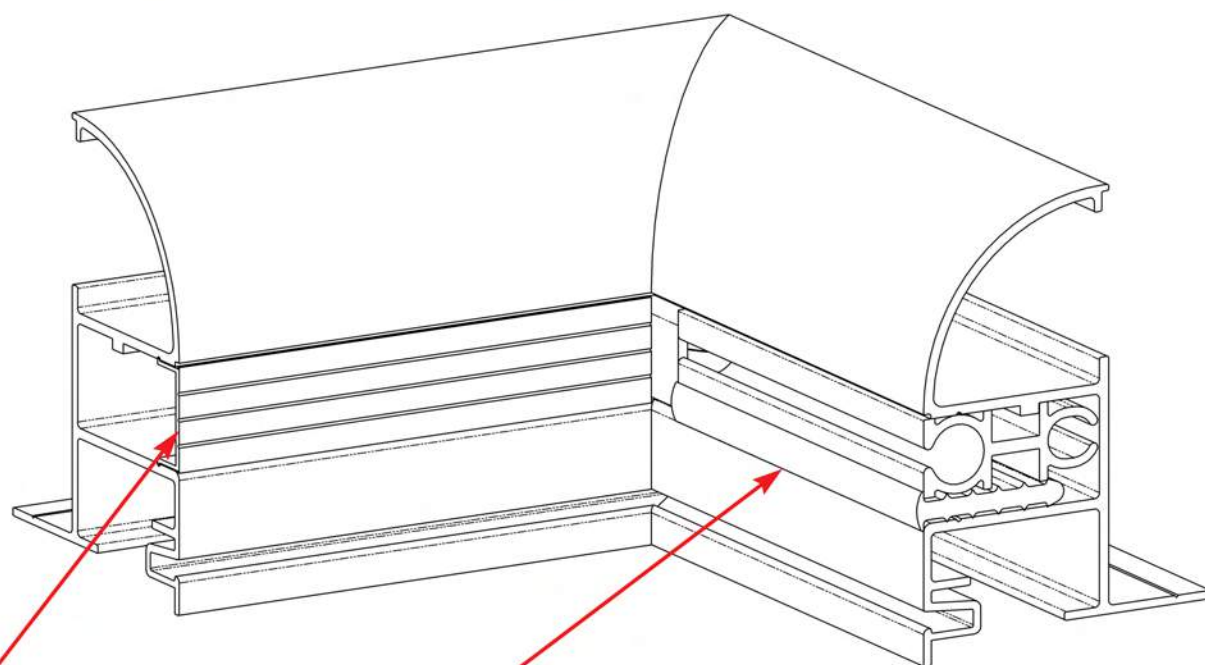

INSERT FILLER STRIP INTO  
COPING AT END OF POOL

INSTALL FLEXI-WEDGE  
USING A RUBBER MALLOT  
TO RETAIN TRACK

