



Installation Guide





WARNING: Be sure you have read and understood the "Safety" section

WARNING: For your safety, your pool is not designed for diving and/or jumping in head first. Please do not dive. Diving may result in permanent injury or death.

INSTALLER: Once the installation of the pool is complete, it is important to give this document to the customer in person.

REGENCY ABOVE GROUND ROUND POOL INSTRUCTIONS

ABOVE GROUND POOL SAFETY



FAILURE TO HEED THESE WARNINGS CAN RESULT IN PERMANENT INJURY, PARALYSIS FROM A BROKEN NECK, ELECTROCUTION OR DROWNING.
THIS POOL IS NOT DESIGNED FOR DIVING OR JUMPING!
DANGEROUS INJURY CAN RESULT, SHALLOW WATER!

Your pool contains a large quantity of water, and is deep enough to present inherent dangers to life and health unless the following safety rules are strictly observed. First-time users run the highest risk of injury. Make sure everyone understands. To insure your pool is used safely you **must** observe the following safety precautions:

1. NO JUMPING OR DIVING

The top rail of your pool is not a walkway and must not be used for jumping or diving. Do not permit jumping or diving into the pool from a deck or the top rail of the pool. Diving or jumping into the pool can result in serious injury.

2. NEVER USE THE POOL ALONE

Never permit the pool to be used unless it is attended by at least one person other than the bather. Someone should always be available to lend assistance in an emergency.

3. NEVER LEAVE CHILDREN UNATTENDED

Never leave a child alone and unsupervised in or near the pool—not even for a second. There is no substitute for constant adult supervision.

4. NO ROUGH PLAY

Do not permit "rough-playin" in and around your pool. Surfaces can become slippery and hazardous when wet.

5. LIGHT THE POOL AT NIGHT

If the pool is used after dusk, adequate lighting must be provided. Illumination in the pool area must be sufficient to clearly judge pool depth and all features in and around the pool. For lighting recommendations, consult your local licensed electrical contractor

6. RESTRICT ACCESS TO THE POOL

Do not leave chairs or other furniture beside the pool that could be used by a child to climb up into the pool. Ladders must be removed whenever the pool is unattended. A fence with a lockable gate around the pool or yard is strongly recommended and may be required by law in some jurisdictions.

7. NO ALCOHOL OR DRUGS

Never drink alcoholic beverages or use any intoxicants which could hinder your judgment and reflexes.

8. KEEP YOUR POOL CLEAN AND SANITARY

Your filter system will remove suspended particles from the water and the surface skimmer will remove insects, leaves and other debris from the water surface. Use the correct pool chemicals as directed to destroy harmful bacteria and prevent formation of algae. Remember, unsanitary water is a serious health hazard.

9. KEEP OFF TOP LEDGES

Do not walk on top ledges. They can be slippery and they are not a walkway.

10.POOL COVER SAFETY

The cover must have a tamperproof locking retainer cable that positions the cover around the pool wall and keeps it securely in place. Never allow anyone, especially small children on the cover. Asphyxiation or drowning could result. When purchasing any pool cover, please consult a swimming pool professional.

11.ELECTRICAL HAZARD

Never touch or attempt to service electrical equipment, including the filter when your body and/ or the ground is wet. Electrocution or permanent injury due to high voltage (120V AC) could result. The pool should be bonded in accordance with Section 680-26 of the National Electical Code. For further assistance contact your dealer or a local licensed electrician. Do not use pool during electrical or rain storms.

12.SAFETY ROPE & POLE

Keep a safety rope 1/4" by 50" with a flotation buoy with an outside diamter of 15". Have accessible in a prominent area by your pool. Keep a pole not less that 16 feet (4,88m) long with a blunt or hook end available at pool side in case of emergencies.

13. POOL CHEMICALS

Do not place chlorine, chlorine tablets or sticks directly into skimmer, or winterize your pool with liquid chlorine. Damage to the skimmer, pool liner and filter will result. Failure to obey this instruction will void all component warranties. Always follow Chemical Manufacturer's instructions when storing, handling and dispensing pool chemicals.

14.CHECK FOR DAMAGE

Periodically check your pool and ladder components for damage and wear. Be sure all screws are in place. Replace all damaged or worn components and tighten all screws before you use the pool, deck or ladders. At first sign remove rust and touch up immediately.

15. POOL PARTS

Never modify the pool or accessories, or remove or drill holes in the pool, deck or ladder components unless instructed. Your pool wall is made of thin metal, there is an inherent cut hazard with metal so use gloves during installation. Always use Original Equipment Manufactured parts for your replacement parts.

FOLLOW ALL SAFETY INSTRUCTIONS

Read and follow all safety instructions packaged with pool, ladder, deck or any other accessory. Additional pool safety publications can be obtained by contacting: The Association of Pool & Spa Professionals (www.apsp.org)

REMEMBEI WATCH CHILDREN



IMPORTANT NOTICE READ BEFORE INSTALLATION!

The safety stickers must be installed as per following instructions. Failure to properly install warning labels will void warranty. Failure to mount these safety labels may subject you to substantial liability in case of injury. These warning are not to be removed under any circumstances! If they become discolored or fall off please request replacements which will be sent at no charge.



A DANGER


DO NOT DIVE SHALLOW WATER Could cause permanent injury PLACE SIGN ON LINER ABOVE WATER LINE, OPPOSITE EN-TRY TO POOL



PLACE SIGN ON WALL NEXT TO POOL ENTRY


INSTALLATION MANUAL ROUND POOLS

INSPIRATION REGENCY (STR/RTR/LX)

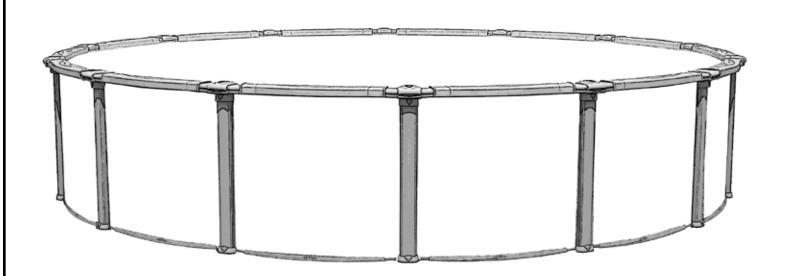

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

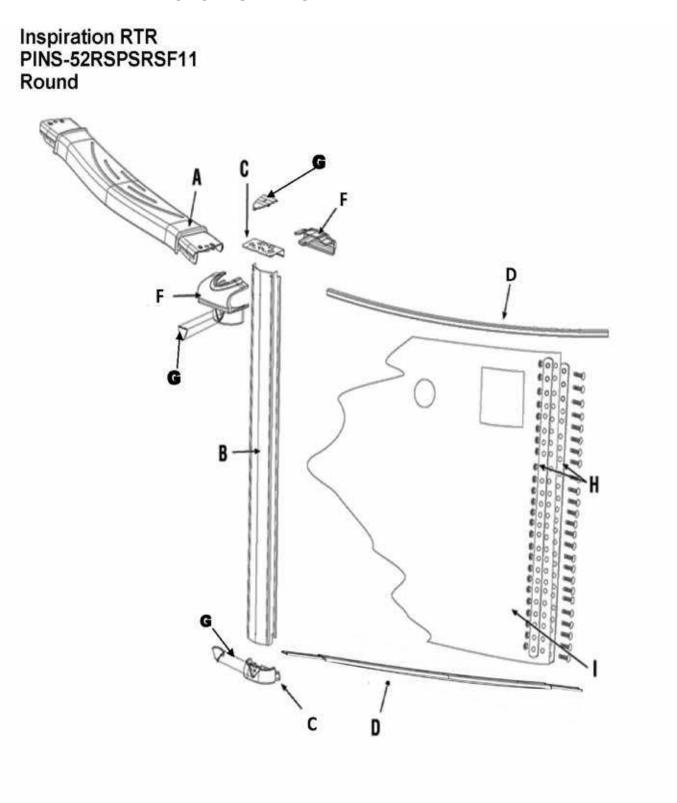

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : t Code :	Inspiration Round							Revi	sed Sep	t 2016
Produc	t Code :	PINS-52RSPSRSF	-11						79.000	and the second	
	Description	Part #	Lameth	Quant 12	15	18	r insta	24	27	30	33
ndex #	Description Top ledge	SD777-001-R	Length	8	10	12	14	16	18	20	22
В		SDT777-R10138M		8	10	12	14	16	18	20	22
С	Upright Bottom plate	SD777-26300A		8	10	12	14	16	18	20	22
С	Top plate	20668A		8	10	12	14	16	18	20	22
D	Stabilizer/ Bottom rail	LA1255612	55,750"	16	10	12	14	10	10	20	22
D	Stabilizer/Bottom rail			10	20		\vdash				-
D	Stabilizer/Bottom rail	LA1255615	55,875"	-	20	24	\vdash				
D	Stabilizer/Bottom rail	LA1255618	55,875"			24	28				-
	A CONTRACTOR OF THE PROPERTY O	LA1255621	55,750"				20	22			-
D	Stabilizer/Bottom rail	LA1255624	56,125"	-			\vdash	32	36	\vdash	-
D	Stabilizer/Bottom rail	LA1255627	55,688"	<u> </u>	-		_		36	40	11
D	Stabilizer/Bottom rail	LA1255630	56,000"	_	10	12	4.4	1.0	10	40	44
F	Ledge cover	SD777-26100AB	F2 000H	8	10	12	14	16	18	20	22
Н	Steel bar	11823	52,000"	2	2	2	2	2	2	2	2
1	Wall	CACCARCETTT		1	1	1	1	1	1	1	1
G	Caps bag	SACCAPCF777-08		1			<u> </u>	_			<u> </u>
G	Caps bag	SACCAPCF777-10		<u> </u>	1		<u> </u>				_
G	Caps bag	SACCAPCF777-12		Ь.	<u> </u>	1	_	_		_	<u> </u>
G	Caps bag	SACCAPCF777-14		_			1	_			_
G	Caps bag	SACCAPCF777-16		<u> </u>				1			
G	Caps bag	SACCAPCF777-18							1	$ldsymbol{ldsymbol{eta}}$	_
G	Caps bag	SACCAPCF777-20		_	_					1	1
	Kit 3 plug Inspiration	CAPCF777		8	10	12	14	16	18	20	20
	Bag of plastic spacers	SACSP625X250-8		1							
	Bag of plastic spacers	SACSP625X250-10			1						1
	Bag of plastic spacers	SACSP625X250-12				1					1
	Bag of plastic spacers	SACSP625X250-14					1				
	Bag of plastic spacers	SACSP625X250-16						1			
	Bag of plastic spacers	SACSP625X250-18							1		
	Bag of plastic spacers	SACSP625X250-20								1	
*	Hardware bag/pool	SACV12X34-33	12 SCREWS 3/4"	1							
*	Hardware bag/pool	SACV12X34-49	12 SCREWS 3/4"		1	1					
*	Hardware bag/pool	SACV12X34-58	12 SCREWS 3/4"				1				_
*	Hardware bag/pool	SACV12X34-66	12 SCREWS 3/4"					1			
*	Hardware bag/pool	SACV12X34-74	12 SCREWS 3/4"						1		
*	Hardware bag/pool	SACV12X34-86	12 SCREWS 3/4"							1	
*	Hardware bag/pool	SACV12X34-98	12 SCREWS 3/4"								1
	Screw 12x3/4	V12x34		33	49	49	58	66	74	86	98
***	Hardware bag/pool	SACVHL12114-42	12 1-1/4" pan washer	1							
***	Hardware bag/pool	SACVHL12114-53	12 1-1/4" pan washer		1						1
***	Hardware bag/pool	SACVHL12114-63	12 1-1/4" pan washer			1					1
***	Hardware bag/pool	SACVHL12114-74	12 1-1/4" pan washer				1		8		
***	Hardware bag/pool	SACVHL12114-84	12 1-1/4" pan washer					1			
***	Hardware bag/pool	SACVHL12114-95	12 1-1/4" pan washer						1		
***	Hardware bag/pool	SACVHL12114-105	12 1-1/4" pan washer							1	
	Screw 12x1-1/4S	VHL12x114S		42	53	63	74	84	95	105	116
**	Hardware bag/ wall	1050000054		1	1	1	1	1	1	1	1

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : t Code :	1						Revi	ed Sep	ot 2016	
			Quant	ity req	uired fo	or insta	llation (by poo	ol size)		
Index #	Description	Part #	Length	12	15	18	21	24	27	30	33
	Thruss phill 18-8 bolts 18-8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31	31
	Flange nuts S/S 1/4-20 Serrated	2FGS422		31	31	31	31	31	31	31	31
	DVD Installation	SACWBI36876		1	1	1	1	1	1	1	1

^{*} In the hardware bag/pool you ill find parts: #V12x34


^{**} In the hardware bag/wall you will find parts: #99-0023 - #2FGS422

^{***} In the hardware bag/pool you will find parts: VHL12114S

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Inspiration DLX RTR PINS-52RSRRRRF11 Round

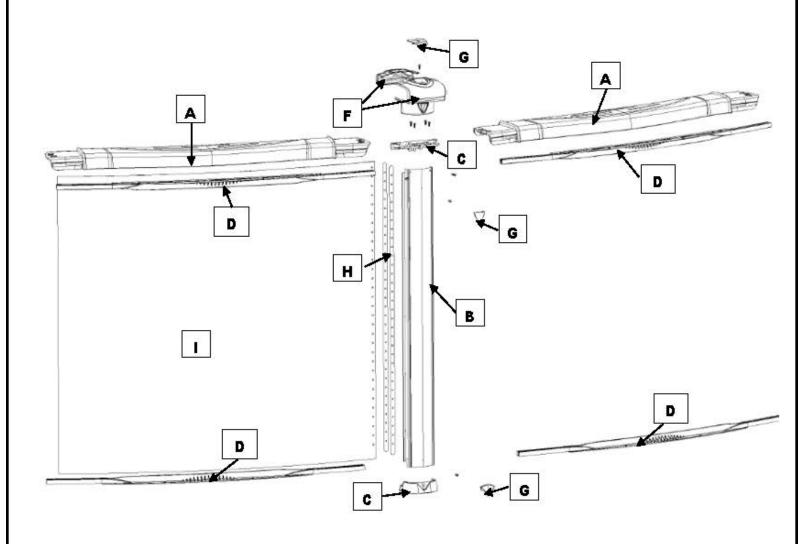

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	ct Description :	Inspiration DLX F						Revis	ed Sep	t 2016	
Produ	ct Code :	PINS-52RSRRRR	F11								
			U 20 300		_		nstallat	_	_	_	
Index#	THE PERSON AND THE PROPERTY OF THE PERSON NAMED IN COLUMN TWO IS NOT THE PERSON NAMED IN COLUMN TO THE PERSON NAMED IN COLUMN	Part #	Length	12	15	18	21	24	27	30	33
Α	Top ledge	SD777-001-R	56"	8	10	12	14	16	18	20	22
В	Upright	SDT777-R10138M	51,750"	8	10	12	14	16	18	20	22
С	Bottom plate	SD777-26300A		8	10	12	14	16	18	20	22
С	Top plate	CG20668A		8	10	12	14	16	18	20	22
D	Stabilizer/Bottom rail	1525515	54,125"	16	20		8				
D	Stabilizer/Bottom rail	1525524	55-1/4"			24	28	32	36		
D	Stabilizer/Bottom rail	1525530	55-1/4"							40	44
F	Ledge cover	SD777-26100AB		8	10	12	14	16	18	20	22
G	Plugs bag	SACCAPCF777-08		1							
G	Plugs bag	SACCAPCF777-10			1						
G	Plugs bag	SACCAPCF777-12				1					
G	Plugs bag	SACCAPCF777-14	0				1				
G	Plugs bag	SACCAPCF777-16						1			
G	Plugs bag	SACCAPCF777-18							1		
G	Plugs bag	SACCAPCF777-20	*							1	\vdash
G	Plugs bag	SACCAPCF777-22									1
Н	Steel bar	11823	52,000"	2	2	2	2	2	2	2	2
i i	Wall	11025	32,000	1	1	1	1	1	1	1	1
****	Kit 3 Plugs	CAPCF777		8	10	12	14	16	18	20	22
*	Hardware bag/pool	SACV12X34-33	12 screws 3/4"	1	10			10	10		
*	Hardware bag/pool	SACV12X34-49	12 screws 3/4"	<u> </u>	1	1	_		\vdash		\vdash
*	Hardware bag/pool	SACV12X34-58	12 screws 3/4"			<u> </u>	1		\vdash		\vdash
*	Hardware bag/pool	SACV12X34-66	12 screws 3/4"				1	1	\vdash		\vdash
*	Hardware bag/pool	SACV12X34-74	12 screws 3/4"					-	1		-
*	Hardware bag/pool	SACV12X34-74	12 screws 3/4"		7		0		1	1	\vdash
*		Company of the control of the contro	12 screws 3/4"		_	-	_			1	1
(9)	Hardware bag/pool	SACV12X34-98	12 screws 3/4	33	49	49	58	66	74	86	98
***	Screw 12x3/4	V12x34	101111	_	49	49	58	66	/4	86	98
***	Hardware bag/pool	SACVHL12114-42	12 1-1/4 pan washer	1	_		-		_	-	
***	Hardware bag/pool	SACVHL12114-53	12 1-1/4 pan washer	-	1				_	-	1
	Hardware bag/pool	SACVHL12114-63	12 1-1/4 pan washer	-	2	1	_		_		1
***	Hardware bag/pool	SACVHL12114-74	12 1-1/4 pan washer	_		_	1		_	_	
***	Hardware bag/pool	SACVHL12114-84	12 1-1/4 pan washer			_	_	1		_	_
***	Hardware bag/pool	SACVHL12114-95	12 1-1/4 pan washer						1		
***	Hardware bag/pool	SACVHL12114-105	12 1-1/4 pan washer							1	
	Screw 12x1-1/4S	VHL12x114S		42	53	63	74	84	95	105	116
****	Hardware bag/pool	SACFW10X34S-35	10 x 3/4 flat washer	1							
****	Hardware bag/pool	SACFW10X34S- 45	10 x 3/4 flat washer		1						
****	Hardware bag/pool	SACFW10X34S- 50	10 x 3/4 flat washer			1					
****	Hardware bag/pool	SACFW10X34S- 60	10 x 3/4 flat washer				1				
****	Hardware bag/pool	SACFW10X34S- 65	10 x 3/4 flat washer				3	1			
****	Hardware bag/pool	SACFW10X34S- 75	10 x 3/4 flat washer				8		1		
****	Hardware bag/pool	SACFW10X34S- 85	10 x 3/4 flat washer							1	
****	Hardware bag/pool	SACFW10X34S- 90	10 x 3/4 flat washer								1

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	ct Description :	Inspiration DLX Rou						Revis	ed Sept	2016	
Produ	ct Code :	PINS-52RSRRRRF1	Ĭ	Quanti	ty requi	red for	nstallat	ion (by	nool size	.1	_
Index#	Description	Part #	Length	12	15	18	21	24	27	30	33
	Flat washer 10x3/4S	FW10x34S		35	45	50	60	65	75	85	90
	Bag of plastic spacers	SACSP625X250-8		1							
	Bag of plastic spacers	SACSP625X250-10			1						1
	Bag of plastic spacers	SACSP625X250-12				1					1
	Bag of plastic spacers	SACSP625X250-14					1				
	Bag of plastic spacers	SACSP625X250-16						1			
	Bag of plastic spacers	SACSP625X250-18							1		
	Bag of plastic spacers	SACSP625X250-20								1	
****	Plastic spacer	SP0625X0250		8	10	12	14	16	18	20	22
**	Hardware bag/wall	1050000054		1	1	1	1	1	1	1	1
	Thruss phill 18-8 bolts 18- 8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31	31
	Flange nuts S/S 1/4-20 Serrated	2FGS422		31	31	31	31	31	31	31	31
	DVD Installation	SACWBI36876		1	1	1	1	1	1	1	1

^{*} In the hardware bag/pool you will find parts: #V12x34

^{**} In the hardware bag/wall you will find parts: #99-0023 - #2FGS422

^{***} In the hardware bag/pool you will find parts: #VHL12114

^{****} In the hardware bag/pool you will find parts: #FW10x34S


^{*****} In the bag of platic spacers you will find parts: #SP0625X0250

^{******} In the plugs bag you will find parts: #CAPCH777

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Inspiration RTR PINS-52RSRSRSF11 Round

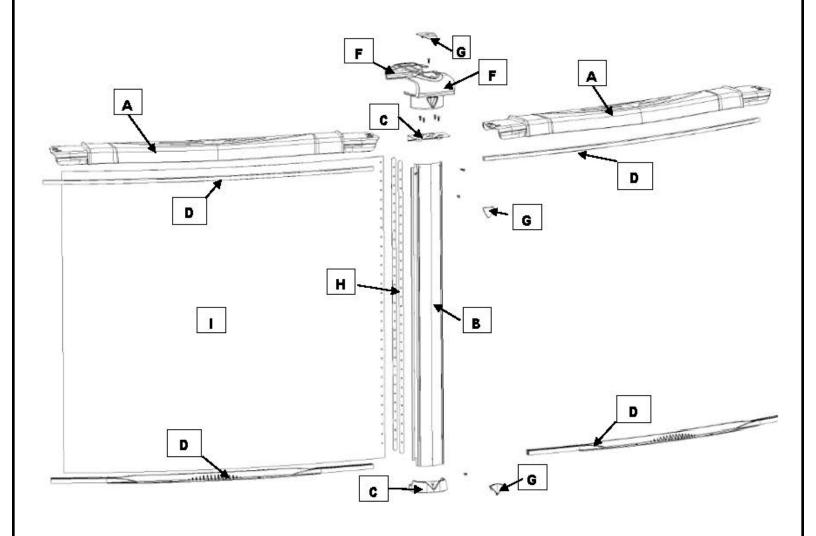

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : t Code :	Inspiration Round PINS-52RSRSRS							Revis	sed Sep	t 201
				Quant	ity requ	uired fo	or instal	lation (by poo	ol size)	
ndex #	Description	Part #	Length	12	15	18	21	24	27	30	33
Α	Top ledge	SD777-001-R		8	10	12	14	16	18	20	22
В	Upright	SDT777-R10138M	51,750"	8	10	12	14	16	18	20	22
С	Bottom plate	SD777-26300A		8	10	12	14	16	18	20	22
С	Top plate	20668A		8	10	12	14	16	18	20	22
D	Bottom rail	1525515		8	10						
D	Bottom rail	1525524				12	14	16	18		
D	Bottom rail	1525530								20	22
D	Stabilizer 12' dia.	LA1255612	55,750"	8							
D	Stabilizer 15' dia.	LA1255615	55,875"		10						
D	Stabilizer 18' dia.	LA1255618	55,875"			12					
D	Stabilizer 21' dia.	LA1255621	55,750"				14				
D	Stabilizer 24' dia.	LA1255624	56,125"					16			Г
D	Stabilizer 27' dia.	LA1255627	55,688"						18		
D	Stabilizer 30' dia.	LA1255630	56,000"							20	22
F	Ledge cover	SD777-26100AB		8	10	12	14	16	18	20	22
G	Caps bag	SACCAPCF777-08		1							
G	Caps bag	SACCAPCF777-10			1						
G	Caps bag	SACCAPCF777-12				1					
G	Caps bag	SACCAPCF777-14					1			\Box	
G	Caps bag	SACCAPCF777-16						1			
G	Caps bag	SACCAPCF777-18				\vdash	\Box		1	-	
G	Caps bag	SACCAPCF777-20								1	1
Н	Steel bar	11823	52,000"	2	2	2	2	2	2	2	2
1	Wall			1	1	1	1	1	1	1	1
	Kit 3 plug Inspiration	CAPCF777		8	10	12	14	16	18	20	20
-	Bag of plastic spacers	SACSP625X250-8		1							
	Bag of plastic spacers	SACSP625X250-10		_	1	\vdash	\vdash			\vdash	1
	Bag of plastic spacers	SACSP625X250-12				1				\vdash	1
-	Bag of plastic spacers	SACSP625X250-14		\vdash			1	-		\vdash	
**	Bag of plastic spacers	SACSP625X250-16						1		\vdash	\vdash
	Bag of plastic spacers	SACSP625X250-18							1	\vdash	
	Bag of plastic spacers	SACSP625X250-20					\vdash		_	1	
*	Hardware bag/pool	SACV12X34-33	12 SCREWS 3/4"	1	-		\vdash				\vdash
*	Hardware bag/pool	SACV12X34-49	12 SCREWS 3/4"		1	1					
*	Hardware bag/pool	SACV12X34-58	12 SCREWS 3/4"		Ť		1			\vdash	
*	Hardware bag/pool	SACV12X34-66	12 SCREWS 3/4"					1		\vdash	
*	Hardware bag/pool	SACV12X34-74	12 SCREWS 3/4"						1	\vdash	
*	Hardware bag/pool	SACV12X34-86	12 SCREWS 3/4"				\vdash		_	1	\vdash
*	Hardware bag/pool	SACV12X34-98	12 SCREWS 3/4"			\vdash				Ė	1
	Screw 12x3/4	V12x34		33	49	49	58	66	74	86	98
***	Hardware bag/pool	SACVHL12114-42	12 1-1/4" pan washer	1	<u> </u>	.,	ات ا		, 1	ت ا	٣
***	Hardware bag/pool	SACVHL12114-53	12 1-1/4" pan washer	_	1		\vdash	\vdash		\vdash	1
***	Hardware bag/pool	SACVHL12114-63	12 1-1/4" pan washer		Ť	1				\vdash	1
***	Hardware bag/pool	SACVHL12114-03	12 1-1/4" pan washer	\vdash	\vdash	-	1	\vdash		\vdash	_
***	Hardware bag/pool	SACVHL12114-84	12 1-1/4" pan washer	\vdash			_	1		\vdash	\vdash
***	Hardware bag/pool	SACVHL12114-95	12 1-1/4" pan washer	\vdash	-		\vdash	-	1	\vdash	\vdash
	and a bab/ book	SACVHL12114-105	12 1-1/4" pan washer	_	_	_	-	_	-	1	\vdash

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : t Code :	Inspiration Round PINS-52RSRSRSF1	1						Revi	sed Sep	t 2016
	ndex # Description Part # Leng				ity req	uired fo	or insta	lation (by poo	ol size)	
Index #	Description	Part #	Length	12	15	18	21	24	27	30	33
		VHL12x114S		42	53	63	74	84	95	105	116
**	Hardware bag/ wall	1050000054		1	1	1	1	1	1	1	1
	Thruss phill 18-8 bolts 18-8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31	31
	Flange nuts S/S 1/4-20 Serrated	2FGS422		31	31	31	31	31	31	31	31
	DVD Installation	SACWBI36876		1	1	1	1	1	1	1	1

^{*} In the hardware bag/pool you ill find parts: #V12x34 $\,$


^{**} In the hardware bag/wall you will find parts: #99-0023 - #2FGS422

^{***} In the hardware bag/pool you will find parts: VHL12114S

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Inspiration STR PINS-52SSPSRSF11 Round

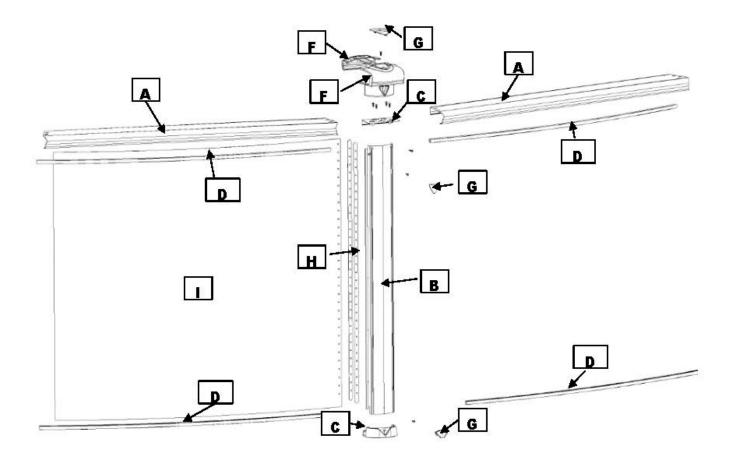

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

A Top ledge 30" SDT776-1296130 30 A Top ledge 50" SDT776-1296150 50 A Top ledge 52" SDT776-1296152 51 A Top ledge 56" SDT776-1296156 56 B Upright 52" SDT777-R10138M 51 C Bottom plate SD777-26300A C Top plate 20668A D Stabilizer/Bottom rail 8' LA1254108 30 D Stabilizer/Bottom rail 12' LA1254112 49 D Stabilizer/Bottom rail 15' LA1254115 50 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 24' LA1255624 56 D Stabilizer/Bottom rail 27' LA1255620 56 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 50 G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-10 F Hardware bag for pool SACV12X34-98 12 SCF Hardware bag for pool SACV12X34-102 12 SCF Hardware bag for pool SACV12X34-113 12 SCF Hardware bag for pool SACV12X34-147 12 SCF Hardware bag for pool SACV12X34-147 12 SCF Hardware bag for pool SACV12X34-147 12 SCF		Quantit	ty requir	ed for in	estallatio	on (by no	ool size)		
A Top ledge 30" SDT776-1296130 30 A Top ledge 50" SDT776-1296150 50 A Top ledge 52" SDT776-1296152 51 A Top ledge 56" SDT776-1296156 56 B Upright 52" SDT777-R10138M 51 C Bottom plate SD777-26300A C Top plate 20668A D Stabilizer/Bottom rail 8' LA1254108 30 D Stabilizer/Bottom rail 12' LA1254112 49 D Stabilizer/Bottom rail 18' LA1254115 50 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 30' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 68 Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-10 F Hardware bag for pool SACV12X34-98 12 SCF Hardware bag for pool SACV12X34-102 12 SCF Hardware bag for pool SACV12X34-113 12 SCF Hardware bag for pool SACV12X34-147 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-184 12 SCF	Length	8	12	15	18	21	24	27	30
A Top ledge 50" SDT776-1296150 50 A Top ledge 52" SDT776-1296152 51 A Top ledge 56" SDT776-1296156 56 B Upright 52" SDT777-R10138M 51 C Bottom plate SD777-26300A C Top plate 20668A D Stabilizer/Bottom rail 8' LA1254108 30 D Stabilizer/Bottom rail 12' LA1254112 49 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 22' LA1255624 56 D Stabilizer/Bottom rail 27' LA1255624 56 D Stabilizer/Bottom rail 27' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 6 G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-10 G Bag of caps pl	30,000"	10							
A Top ledge 52" SDT776-1296152 51 A Top ledge 56" SDT776-1296156 56 B Upright 52" SDT777-R10138M 51 C Bottom plate SD777-26300A C Top plate 20668A D Stabilizer/Bottom rail 8' LA1254108 30 D Stabilizer/Bottom rail 12' LA1254112 49 D Stabilizer/Bottom rail 15' LA1254115 50 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 27' LA1255624 56 D Stabilizer/Bottom rail 30' LA1255620 56 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 6 G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-10 G Bag of caps p	50,375"		9						
A Top ledge 56" SDT776-1296156 56 B Upright 52" SDT777-R10138M 51 C Bottom plate SD777-26300A 51 C Top plate 20668A 30 D Stabilizer/Bottom rail 12' LA1254112 49 D Stabilizer/Bottom rail 15' LA1254115 50 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 24' LA1255624 56 D Stabilizer/Bottom rail 30' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 56 G Bag of caps plugs SACCAPCF777-10 56 G Bag of caps plugs SACCAPCF777-12 56 G Bag of caps plugs SACCAPCF777-12 57 G Bag of caps plugs SACCAPCF777-14 56 G Bag of caps plug	51,750"			11					
B Upright 52" SDT777-R10138M 51 C Bottom plate SD777-26300A C Top plate 20668A D Stabilizer/Bottom rail 8' LA1254108 30 D Stabilizer/Bottom rail 12' LA1254112 49 D Stabilizer/Bottom rail 15' LA1254115 50 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 24' LA1255624 56 D Stabilizer/Bottom rail 30' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 56 G Bag of caps plugs SACCAPCF777-10 56 G Bag of caps plugs SACCAPCF777-11 57 G Bag of caps plugs SACCAPCF777-12 57 G Bag of caps plugs SACCAPCF777-14 57 G Bag of caps plugs SACCAPCF777-18	56,375"				12	14	16	18	20
C Bottom plate 20668A D Stabilizer/Bottom rail 8' LA1254108 3C D Stabilizer/Bottom rail 12' LA1254112 49 D Stabilizer/Bottom rail 15' LA1254115 5C D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 24' LA1255624 56 D Stabilizer/Bottom rail 27' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 6 G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-10 H Steel bar 11823 52 I Steel wall Kit 3 plug Inspiration CAPCF777 * Hardware bag for pool SACV12X34-98 12 SCF Hardware bag for pool SACV12X34-102 12 SCF Hardware bag for pool SACV12X34-113 12 SCF Hardware bag for pool SACV12X34-113 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-184 12 SCF SCF Hardware bag for pool SACV12X34-184 12 SCF SCF Hardware bag for pool SACV12X34-184 12 SCF SCF SCF Hardware bag for pool SACV12X34-184 12 SCF	51,750"	10	9	11	12	14	16	18	20
D Stabilizer/Bottom rail 8' LA1254108 30 D Stabilizer/Bottom rail 12' LA1254112 49 D Stabilizer/Bottom rail 15' LA1254115 50 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 24' LA1255624 56 D Stabilizer/Bottom rail 30' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 56 G Bag of caps plugs SACCAPCF777-10 56 G Bag of caps plugs SACCAPCF777-10 57 G Bag of caps plugs SACCAPCF777-12 57 G Bag of caps plugs SACCAPCF777-14 57 G Bag of caps plugs SACCAPCF777-16 57 G Bag of caps plugs SACCAPCF777-18 57 G Bag of caps plugs SACCAPCF777-18 57 <td< td=""><td></td><td>10</td><td>9</td><td>11</td><td>12</td><td>14</td><td>16</td><td>18</td><td>20</td></td<>		10	9	11	12	14	16	18	20
D Stabilizer/Bottom rail 8' LA1254108 30 D Stabilizer/Bottom rail 12' LA1254112 49 D Stabilizer/Bottom rail 15' LA1254115 50 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 24' LA1255624 56 D Stabilizer/Bottom rail 27' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 56 G Bag of caps plugs SACCAPCF777-10 56 G Bag of caps plugs SACCAPCF777-10 56 G Bag of caps plugs SACCAPCF777-12 57 G Bag of caps plugs SACCAPCF777-14 57 G Bag of caps plugs SACCAPCF777-16 57 G Bag of caps plugs SACCAPCF777-18 57 G Bag of caps plugs SACCAPCF777-18 52 <td< td=""><td></td><td>10</td><td>9</td><td>11</td><td>12</td><td>14</td><td>16</td><td>18</td><td>20</td></td<>		10	9	11	12	14	16	18	20
D Stabilizer/Bottom rail 15' LA1254115 50 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 21' LA1255624 56 D Stabilizer/Bottom rail 27' LA1255624 56 D Stabilizer/Bottom rail 27' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-18 I Steel bar 11823 52 I Steel wall Kit 3 plug Inspiration CAPCF777 * Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF	30,000"	20							
D Stabilizer/Bottom rail 15' LA1254115 50 D Stabilizer/Bottom rail 18' LA1255618 55 D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 27' LA1255624 56 D Stabilizer/Bottom rail 27' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 56 G Bag of caps plugs SACCAPCF777-10 56 G Bag of caps plugs SACCAPCF777-10 57 G Bag of caps plugs SACCAPCF777-11 57 G Bag of caps plugs SACCAPCF777-12 57 G Bag of caps plugs SACCAPCF777-14 57 G Bag of caps plugs SACCAPCF777-16 58 G Bag of caps plugs SACCAPCF777-18 59 G Bag of caps plugs SACCAPCF777-18 50 G Bag of caps plugs SACCAPCF777-18 50 G	49,750"		18						\vdash
D Stabilizer/Bottom rail 21' LA1255621 55 D Stabilizer/Bottom rail 24' LA1255624 56 D Stabilizer/Bottom rail 30' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-11 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACVAPCAPCF777-18 G Bag of caps plugs	50,974"			22					
D Stabilizer/Bottom rail 24' LA1255624 56 D Stabilizer/Bottom rail 27' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-09 G Bag of caps plugs SACCAPCF777-11 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACV12X34-18 12 SCF Hardware bag for pool SACV12X	55,875"				24				
D Stabilizer/Bottom rail 27' LA1255627 55 D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 56 G Bag of caps plugs SACCAPCF777-10 56 G Bag of caps plugs SACCAPCF777-09 56 G Bag of caps plugs SACCAPCF777-11 57 G Bag of caps plugs SACCAPCF777-12 57 G Bag of caps plugs SACCAPCF777-14 57 G Bag of caps plugs SACCAPCF777-16 57 G Bag of caps plugs SACCAPCF777-18 57 G Bag of caps plugs SACCAPCF777-18 52 H Steel bar 11823 52 I Steel bar 11823 52 I Steel wall 57 Kit 3 plug Inspiration CAPCF777 52 * Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware	55,750"					28			
D Stabilizer/Bottom rail 30' LA1255630 56 F Ledge cover SD777-26100AB 56 G Bag of caps plugs SACCAPCF777-10 6 G Bag of caps plugs SACCAPCF777-09 6 G Bag of caps plugs SACCAPCF777-11 7 G Bag of caps plugs SACCAPCF777-12 8 G Bag of caps plugs SACCAPCF777-16 9 G Bag of caps plugs SACCAPCF777-18 18 G Bag of caps plugs SACCAPCF7777-18 18 G Bag of caps	56,125"						32		
F Ledge cover SD777-26100AB G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-09 G Bag of caps plugs SACCAPCF777-11 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-18 I Steel bar 11823 52 I Steel wall Kit 3 plug Inspiration CAPCF777 Hardware bag for pool SACV12X34-98 12 SCF Hardware bag for pool SACV12X34-102 12 SCF Hardware bag for pool SACV12X34-113 12 SCF Hardware bag for pool SACV12X34-129 12 SCF Hardware bag for pool SACV12X34-147 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-184 12 SCF SCFW 12X3/4 V12X34	55,688"							36	
G Bag of caps plugs SACCAPCF777-10 G Bag of caps plugs SACCAPCF777-09 G Bag of caps plugs SACCAPCF777-11 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-18 I Steel bar SACCAPCF777-20 H Steel bar Steel wall Kit 3 plug Inspiration CAPCF777 Hardware bag for pool SACV12X34-98 12 SCF Hardware bag for pool SACV12X34-102 12 SCF Hardware bag for pool SACV12X34-113 12 SCF Hardware bag for pool SACV12X34-129 12 SCF Hardware bag for pool SACV12X34-147 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-184 12 SCF SCFW 12X3/4 V12X34	56,000"								4
G Bag of caps plugs SACCAPCF777-09 G Bag of caps plugs SACCAPCF777-11 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-18 I Steel bar SACCAPCF777-20 H Steel bar SACCAPCF777-20 H Steel wall Kit 3 plug Inspiration CAPCF777 * Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF SCFW 12X3/4 V12X34		10	9	11	12	14	16	18	2
G Bag of caps plugs SACCAPCF777-11 G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-18 I Steel bar 11823 52 I Steel wall Kit 3 plug Inspiration CAPCF777 * Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34		1							
G Bag of caps plugs SACCAPCF777-12 G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-20 H Steel bar 11823 52 I Steel wall Kit 3 plug Inspiration CAPCF777 * Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34			1						
G Bag of caps plugs SACCAPCF777-14 G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-18 H Steel bar 11823 52 I Steel wall Kit 3 plug Inspiration CAPCF777 Hardware bag for pool SACV12X34-98 12 SCF Hardware bag for pool SACV12X34-102 12 SCF Hardware bag for pool SACV12X34-113 12 SCF Hardware bag for pool SACV12X34-147 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-169 12 SCF Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34				1		(† ()			
G Bag of caps plugs SACCAPCF777-16 G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-20 H Steel bar 11823 I Steel wall Kit 3 plug Inspiration CAPCF777 * Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-86 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF					1	5			
G Bag of caps plugs SACCAPCF777-18 G Bag of caps plugs SACCAPCF777-20 H Steel bar 11823 52 I Steel wall Kit 3 plug Inspiration CAPCF777 * Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34						1			
G Bag of caps plugs SACCAPCF777-20 H Steel bar 11823 52 I Steel wall CAPCF777 * Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-86 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF						8	1		
H Steel bar 11823 52 I Steel wall								1	
Steel wall									1
* Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-86 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34	52,000"	2	2	2	2	2	2	2	2
* Hardware bag for pool SACV12X34-98 12 SCF * Hardware bag for pool SACV12X34-86 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34		1	1	1	1	1	1	1	1
* Hardware bag for pool SACV12X34-86 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34		10	9	11	12	14	16	18	20
* Hardware bag for pool SACV12X34-36 12 SCF * Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34	CREWS 3/4"	1							
* Hardware bag for pool SACV12X34-102 12 SCF * Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-129 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34	SCREWS 3/4"		1						
* Hardware bag for pool SACV12X34-113 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34	SCREWS 3/4"			1					
* Hardware bag for pool SACV12X34-123 12 SCF * Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34	SCREWS 3/4"				1				
* Hardware bag for pool SACV12X34-147 12 SCF * Hardware bag for pool SACV12X34-169 12 SCF * Hardware bag for pool SACV12X34-184 12 SCF Screw 12x3/4 V12x34	SCREWS 3/4"					1			
* Hardware bag for pool SACV12X34-165 12 SCF Screw 12x3/4 V12x34	SCREWS 3/4"						1		
Screw 12x3/4 V12x34	SCREWS 3/4"							1	
	SCREWS 3/4"								1
** Hardware for wall 1050000054		98	86	102	113	129	147	169	18
		1	1	1	1	1	1	1	1
Thruss phill 18-8 bolts 18- 8 1/4-0x3/4		31	31	31	31	31	31	31	3
Flange nuts S/S 1/4-20 Serrated 2FGS422		31	31	31	3	31	31	31	3


^{*} In the hardware bag/pool you will find parts: #V12x34

^{**} In the hardware bag/wall you will find parts: #99-0023 $\,$ - #2FGS422 $\,$

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Inspiration DLX RTR PINS-54RSRRRRF11 Round

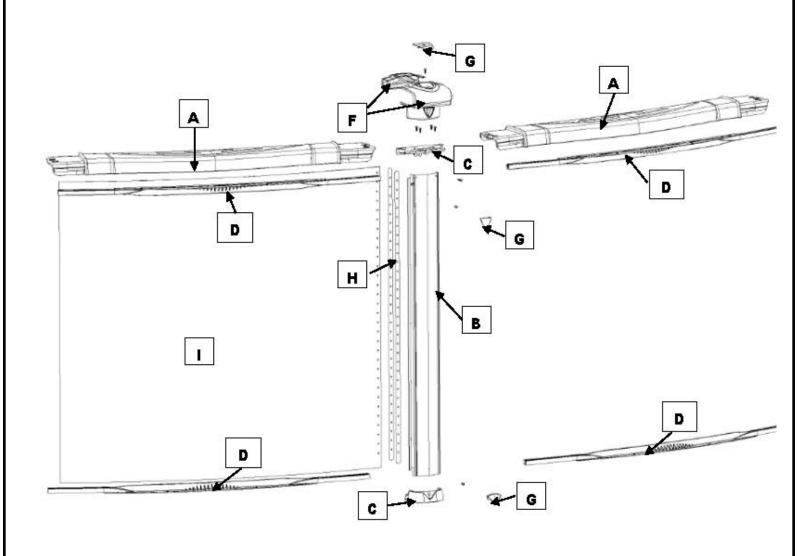

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - CONTENT

Product Description: Inspiration Round Revised Sept 2016
Product Code: PINS-54RSRRRF11

				Quantity	equired fo	r installatio	n (by pool	size)	
Index#	Description	Part #	Length	12	15	18	21	24	27
Α	Top ledge	SD777-001-R	56"	8	10	12	14	16	18
В	Upright	SDT877-R10138M	53,75"	8	10	12	14	16	18
С	Bottom plate	SD777-26300A		8	10	12	14	16	18
С	Top plate	CG20668A		8	10	12	14	16	18
D	Stabilizer / Bottom rail	1525515	55 1/4"	16	20				
D	Stabilizer / Bottom rail	1525524	55 1/4"			24	28	32	36
D	Stabilizer / Bottom rail	1525530	55 1/4"			9-			
F	Ledge cover	SD777-26100AB		8	10	12	14	16	18
G	Bag of caps plugs	SACCAPCF777-08		1					
G	Bag of caps plugs	SACCAPCF777-10			1				
G	Bag of caps plugs	SACCAPCF777-12				1			
G	Bag of caps plugs	SACCAPCF777-14					1		
G	Bag of caps plugs	SACCAPCF777-16						1	
G	Bag of caps plugs	SACCAPCF777-18							1
G	Bag of caps plugs	SACCAPCF777-20							77.50
Н	Steel bar	11825		2	2	2	2	2	2
1	Wall			1	1	1	1	1	1
	Kit 3 plug Inspiration	CAPCF777		8	10	12	14	16	18
*	Hardware bag/pool	SACV12X34-33	#12 screws 3/4	1	7.50,7,5				
*	Hardware bag/pool	SACV12X34-49	#12 screws 3/4	dian.	1	1			
*	Hardware bag/pool	SACV12X34-58	#12 screws 3/4				1		
*	Hardware bag/pool	SACV12X34-66	#12 screws 3/4					1	
*	Hardware bag/pool	SACV12X34-74	#12 screws 3/4			E			1
*	Hardware bag/pool	SACV12X34-86	#12 screws 3/4						
	Screw 12x3/4	V12x34		33	49	49	58	66	74
***	Hardware bag/pool	SACVHL12114-42	#12 screws 1 1/4	1					
***	Hardware bag/pool	SACVHL12114-53	#12 screws 1 1/4		1				
***	Hardware bag/pool	SACVHL12114-63	#12 screws 1 1/4			1			
***	Hardware bag/pool	SACVHL12114-74	#12 screws 1 1/4				1		
***	Hardware bag/pool	SACVHL12114-84	#12 screws 1 1/4					1	
***	Hardware bag/pool	SACVHL12114-95	#12 screws 1 1/4						1
***	Hardware bag/pool	SACVHL12114-105	#12 screws 1 1/4						
	Screw 12x1-1/4	VHL12x114S		42	53	63	74	84	95
****	Hardware bag/pool	SACFW10X34S-35	10x3/4 flat washer	1					
****	Hardware bag/pool	SACFW10X34S-45	10x3/4 flat washer		1				
****	Hardware bag/pool	SACFW10X34S-50	10x3/4 flat washer			1			
****	Hardware bag/pool	SACFW10X34S-60	10x3/4 flat washer			3	1		
****	Hardware bag/pool	SACFW10X34S-65	10x3/4 flat washer					1	
****	Hardware bag/pool	SACFW10X34S-75	10x3/4 flat washer						1
****	Hardware bag/pool	SACFW10X34S-85	10x3/4 flat washer						
	Flat washer	FW10x34S		35	45	50	60	65	75
**	Hardware bag/wall	1050000054		1	1	1	1	1	1
	Thruss phill 18-8 bolts								
	18/8 1/4-0x3/4	99-0023		31	31	31	31	31	31

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - CONTENT

Product Description: Inspiration Round Revised Sept 2016

Product Code : PINS-54RSRRRRF11

				Quantity i	equired fo	r installatio	n (by pool	size)	
Index#	Description	Part #	Length	12	15	18	21	24	27
	Flange nuts S/S 1/4-20								
	Serrated	2FGS422		31	31	31	31	31	31
	Plastic spacer bag	SACSP625X250-8		1					1
	Plastic spacer bag	SACSP625X250-10			1				
	Plastic spacer bag	SACSP625X250-12				1			
	Plastic spacer bag	SACSP625X250-14					1		
	Plastic spacer bag	SACSP625X250-16						1	
	Plastic spacer bag	SACSP625X250-18							1
	Plastic spacer bag	SACSP625X250-20							
	DVD Installation	SACWBI36876		1	1	1	1	1	1

^{*} In the hardware bag/pool you will find parts: #V12x34

^{**} In the harwdare bag/wall you will find parts: #99-0023 - #2FGS422


^{***} In the hardware bag/pool you will find parts: #VHL12114S

^{****} In the hardware bag/pool you will find parts: #FW10x34S

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Inspiration RTR PINS-54RSRRRRF19 Round

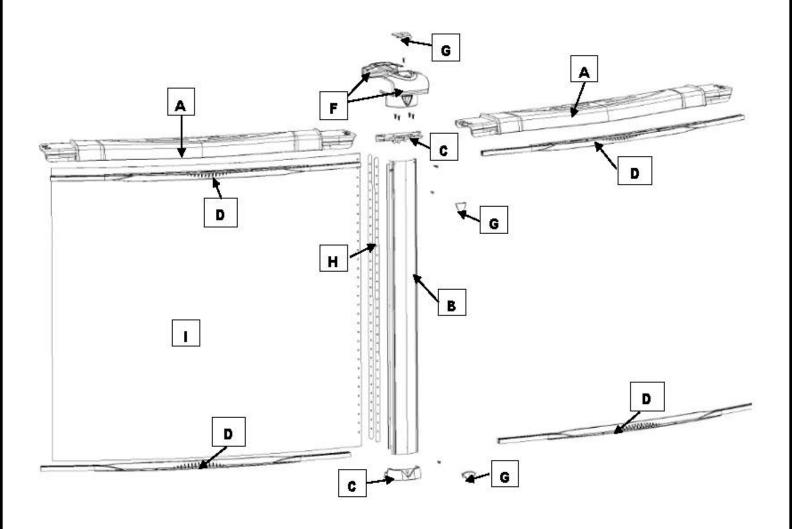

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	et Description : et Code :	Inspiration Round PINS-54RSRRRF		of and				Revise	d Sept 2	2016
				Quantit	y require	d for inst	tallation	(by pool :	size)	
Index#	Description	Part #	Length	12	15	18	21	24	27	30
Α	Top ledge	SD777-001-R	56"	8	10	12	14	16	18	20
В	Upright	SDT877-R10138M	53,75"	8	10	12	14	16	18	20
С	Bottom plate	SD777-26300A		8	10	12	14	16	18	20
С	Top plate	CG20668A		8	10	12	14	16	18	20
D	Stabilizer / Bottom rail	1525515	55 1/4"	16	20					
D	Stabilizer / Bottom rail	1525524	55 1/4"			24	28	32	36	
D	Stabilizer / Bottom rail	1525530	55 1/4"				2			40
F	Ledge cover	SD777-26100AB		8	10	12	14	16	18	20
	Round Coping	10296		10	12	15	17	19	22	24
G	Bag of caps plugs	SACCAPCF777-08		1						
G	Bag of caps plugs	SACCAPCF777-10			1		O .			\Box
G	Bag of caps plugs	SACCAPCF777-12				1				
G	Bag of caps plugs	SACCAPCF777-14					1			\Box
G	Bag of caps plugs	SACCAPCF777-16						1		\Box
G	Bag of caps plugs	SACCAPCF777-18							1	
G	Bag of caps plugs	SACCAPCF777-20								1
	Kit 3 plug Inspiration	CAPCF777		8	10	12	14	16	18	20
Н	Steel bar	11825		2	2	2	2	2	2	2
- 1	Wall			1	1	1	1	1	1	1
*	Hardware bag/pool	SACV12X34-33	#12 screws 3/4	1						
*	Hardware bag/pool	SACV12X34-49	#12 screws 3/4		1	1				
*	Hardware bag/pool	SACV12X34-58	#12 screws 3/4				1			\vdash
*	Hardware bag/pool	SACV12X34-66	#12 screws 3/4		\vdash			1		\vdash
*	Hardware bag/pool	SACV12X34-74	#12 screws 3/4						1	\vdash
*	Hardware bag/pool	SACV12X34-86	#12 screws 3/4							1
	Screw 12x3/4	V12x34	,	33	49	49	58	66	74	86
***	Hardware bag/pool	SACVHL12114-42	#12 screws 1 1/4	1						
***	Hardware bag/pool	SACVHL12114-53	#12 screws 1 1/4		1					\vdash
***	Hardware bag/pool	SACVHL12114-63	#12 screws 1 1/4		1000	1				\vdash
***	Hardware bag/pool	SACVHL12114-74	#12 screws 1 1/4		\vdash		1			\vdash
***	Hardware bag/pool	SACVHL12114-84	#12 screws 1 1/4					1		\vdash
***	Hardware bag/pool	SACVHL12114-95	#12 screws 1 1/4				7		1	
***	Hardware bag/pool	SACVHL12114-105	#12 screws 1 1/4						1000.7	1
	Screw 12x1-1/4	VHL12X114S		42	53	63	74	84	95	105
****	Hardware bag/pool	SACFW10x34S-35	10X 3/4 flat washer	1						
****	Hardware bag/pool	SACFW10x34S-45	10X 3/4 flat washer		1					\Box
****	Hardware bag/pool	SACFW10x34S-50	10X 3/4 flat washer			1				\vdash
****	Hardware bag/pool	SACFW10x34S-60	10X 3/4 flat washer				1			
****	Hardware bag/pool	SACFW10x34S-65	10X 3/4 flat washer					1		
****	Hardware bag/pool	SACFW10x34S-75	10X 3/4 flat washer						1	\vdash
****	Hardware bag/pool	SACFW10x34S-85	10X 3/4 flat washer							1
	Flat washer	FW10x34S		35	45	50	60	65	75	85

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : et Code :	Inspiration Round PINS-54RSRRRRF19						Revise	d Sept 2	016
				Quantit	y require	d for inst	allation (by pool s	size)	
Index#	Description	Part #	Length	12	15	18	21	24	27	30
**	Hardware bag/wall	1050000054		1	1	1	1	1	1	1
	Thruss phill 18/8 bolts 18/8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31
	Flange nuts S/S 1/4-20 Serrated	2FGS422		31	31	31	31	31	31	31
	Plastic spacer bag	SACSP625X250-8		1						
	Plastic spacer bag	SACSP625X250-10			1					e e
	Plastic spacer bag	SACSP625X250-12				1				
	Plastic spacer bag	SACSP625X250-14					1			2
	Plastic spacer bag	SACSP625X250-16						1		
	Plastic spacer bag	SACSP625X250-18							1	2
	Plastic spacer bag	SACSP625X250-20								1
	DVD Installation	36876		1	1	1	1	1	1	1

^{*} In the harwdare bag/pool you will find parts: #V12x34

^{**} In the hartdware bag/wall you will find parts: #99-0023 - #2FGS422


^{***} In the hardware bag/pool you will find parts: #VHL12114S

^{****} In the harwdare bag/pool you will find parts: #FW10x34S

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Inspiration RTR PINS-54RSRSRSF11 Round

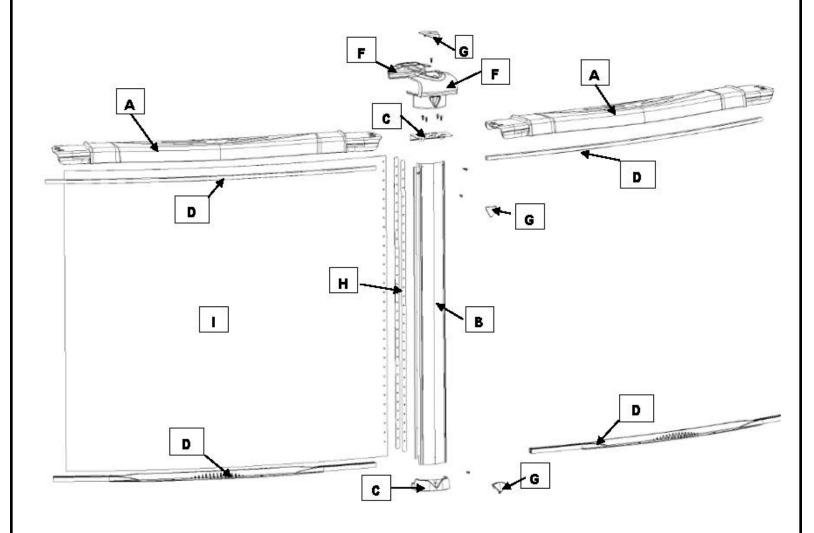

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : t Code :	Inspiration Round						Re	evised Se	pt 2016
			- (1)	Quantit	y requir	ed for in	stallation	(by poo	ol size)	
Index#	Description	Part #	Length	12	15	18	21	24	27	30
Α	Top ledge	SD777-001-R	56"	8	10	12	14	16	18	20
В	Upright	SDT877-R10138M	53,750"	8	10	12	14	16	18	20
С	Bottom plate	SD777-26300A		8	10	12	14	16	18	20
С	Top plate	20668A		8	10	12	14	16	18	20
D	Bottom rail	1525515		8	10					
D	Bottom rail	1525524				12	14	16	18	
D	Bottom rail	1525530								20
D	Stabilizer 12' dia.	LA1255612	55,750"	8						
D	Stabilizer 15' dia.	LA1255615	55,875"		10					
D	Stabilizer 18' dia.	LA1255618	55,875"			12				
D	Stabilizer 21' dia.	LA1255621	55,750"				14			
D	Stabilizer 24' dia.	LA1255624	56,125"					16		
D	Stabilizer 27' dia.	LA1255627	55,688"						18	
D	Stabilizer 30' dia.	LA1255630	56,000"							20
F	Ledge cover	SD777-26100AB		8	10	12	14	16	18	20
G	Bag of caps plugs	SACCAPCF777-08		1						
G	Bag of caps plugs	SACCAPCF777-10			1					
G	Bag of caps plugs	SACCAPCF777-12				1				
G	Bag of caps plugs	SACCAPCF777-14					1			
G	Bag of caps plugs	SACCAPCF777-16					-	1		
G	Bag of caps plugs	SACCAPCF777-18							1	
G	Bag of caps plugs	SACCAPCF777-20					\vdash			1
Н	Steel bar	11825	54,000"	2	2	2	2	2	2	2
1	Wall			1	1	1	1	1	1	1
	Kit 3 plug Inspiration	CAPCF777		8	10	12	14	16	18	20
*	Hardware bag/pool	SACV12X34-33	#12 screws 3/4	1						
*	Hardware bag/pool	SACV12X34-49	#12 screws 3/4		1	1				
*	Hardware bag/pool	SACV12X34-58	#12 screws 3/4				1			
*	Hardware bag/pool	SACV12X34-66	#12 screws 3/4					1		
*	Hardware bag/pool	SACV12X34-74	#12 screws 3/4						1	
*	Hardware bag/pool	SACV12X34-86	#12 screws 3/4							1
	Screw 12x3/4	V12x34	-	33	49	49	58	66	74	86
***	Hardware bag/pool	SACVHL12114-42	#12 screws 1 1/4	1						
***	Hardware bag/pool	SACVHL12114-53	#12 screws 1 1/4		1					
***	Hardware bag/pool	SACVHL12114-63	#12 screws 1 1/4			1				
***	Hardware bag/pool	SACVHL12114-74	#12 screws 1 1/4				1			
***	Hardware bag/pool	SACVHL12114-84	#12 screws 1 1/4					1		
***	Hardware bag/pool	SACVHL12114-95	#12 screws 1 1/4						1	
***	Hardware bag/pool	SACVHL12114-105	#12 screws 1 1/4							1
	Screw 12x1-1/45	VHL12x114S		42	53	63	74	84	95	105
	Plastic spacer bag	SACSP625X250-8		1						
	Plastic spacer bag	SACSP625X250-10			1					
	Plastic spacer bag	SACSP625X250-12				1				
	Plastic spacer bag	SACSP625X250-14					1			
	Plastic spacer bag	SACSP625X250-16						1		
	Plastic spacer bag	SACSP625X250-18							1	

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : t Code :	1					Re	vised Se	pt 2016			
				Quantity required for installation (by pool size)								
Index#	Description	Part #	Length	12	15	18	21	24	27	30		
	Plastic spacer bag	SACSP625X250-20								1		
**	Hardware bag/wall	1050000054		1	1	1	1	1	1	1		
	Thruss phill 18-8 bolts 18-8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31		
	Flange nuts S/S 1/4- 20 Serrated	2FGS422		31	31	31	31	31	31	31		
	DVD Intallation	SACWBI36876		1	1	1	1	1	1	1		

^{*} In the hardware bag/pool you will find parts: #V12x34


^{**} In the hardware bag/wal you will find parts: #99-0023 - #2FGS422

^{***} In the hardware bag/pool you will find parts: #VHL12114S

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Regency RTR PREG-52RSRRRRF41 Round

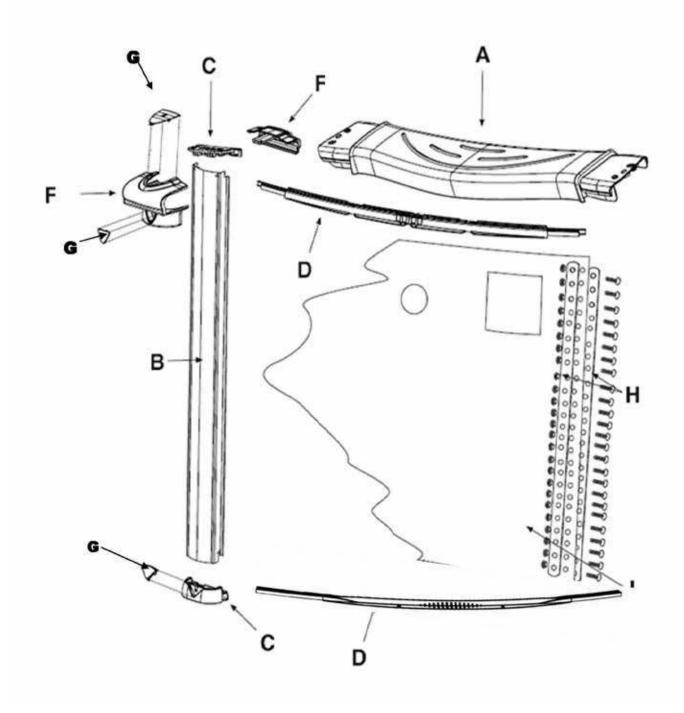

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	ct Description : ct Code :	Regency Round PREG-52RSRRRR	RF41					Revised	Sept 20	16
				Quantit	y require	ed for ins	stallation	(by poo	I size)	
Index#	Description	Part #	Length	12	15	18	21	24	27	30
Α	Top ledge	SD777-001-R		8	10	12	14	16	18	20
В	Upright	MOT777-R10138M	51,750"	8	10	12	14	16	18	20
С	Bottom plate	CB777-26300A		8	10	12	14	16	18	20
С	Top plate	CG20668A		8	10	12	14	16	18	20
D	Stabilizer/Bottom rail	1525515	54,125"	16	20					
D	Stabilizer/Bottom rail	1525524	55-1/4"			24	28	32	36	
D	Stabilizer/Bottom rail	1525530	55-1/4"							40
F	Ledge cover	CB777-26100AB		8	10	12	14	16	18	20
G	Caps bag	SACCAPCH777-08		1						
G	Caps bag	SACCAPCH777-10			1					
G	Caps bag	SACCAPCH777-12				1				
G	Caps bag	SACCAPCH777-14					1			
G	Caps bag	SACCAPCH777-16						1		
G	Caps bag	SACCAPCH777-18							1	
G	Caps bag	SACCAPCH777-20								1
Н	Steel bar	11823	52,000"	2	2	2	2	2	2	2
1	Wall			1	1	1	1	1	1	1
*****	Kit 3 caps	CAPCH777		8	10	12	14	16	18	20
*	Hardware bag/pool	SACV12X34-33	# 12 screws 3/4"	1						
*	Hardware bag/pool	SACV12X34-49	# 12 screws 3/4"		1	1				
*	Hardware bag/pool	SACV12X34-58	# 12 screws 3/4"				1			
*	Hardware bag/pool	SACV12X34-66	# 12 screws 3/4"					1		
*	Hardware bag/pool	SACV12X34-74	# 12 screws 3/4"						1	
*	Hardware bag/pool	SACV12X34-86	# 12 screws 3/4"							1
	Screw 12x3/4	V12x34		33	49	49	58	66	74	86
***	Hardware bag/pool	SACVHL12114-42	#12 1-1/4 pan washer	1						
***	Hardware bag/pool	SACVHL12114-53	#12 1-1/4 pan washer		1					
***	Hardware bag/pool	SACVHL12114-63	#12 1-1/4 pan washer			1				
***	Hardware bag/pool	SACVHL12114-74	#12 1-1/4 pan washer				1			
***	Hardware bag/pool	SACVHL12114-84	#12 1-1/4 pan washer					1		
***	Hardware bag/pool	SACVHL12114-95	#12 1-1/4 pan washer						1	
***	Hardware bag/pool	SACVHL12114-105	#12 1-1/4 pan washer							1
	Screw 12x1-1/4	VHL12x114S		42	53	63	74	84	95	105
****	Hardware bag/pool	SACFW10X34S-35	10 x 3/4 flat washer	1						
	Hardware bag/pool	SACFW10X34S- 45	10 x 3/4 flat washer		1					
****	Hardware bag/pool	SACFW10X34S-50	10 x 3/4 flat washer			1				
****	Hardware bag/pool	SACFW10X34S- 60	10 x 3/4 flat washer				1			
****	Hardware bag/pool	SACFW10X34S- 65	10 x 3/4 flat washer					1		
****	Hardware bag/pool	SACFW10X34S- 75	10 x 3/4 flat washer						1	
****	Hardware bag/pool	SACFW10X34S- 85	10 x 3/4 flat washer							1
	Flat washer	FW10x34S		35	45	50	60	65	75	85
****	Bag of plastic spacers	SACSP625X250-8		1						\vdash
****	Bag of plastic spacers	SACSP625X250-10			1					
****	Bag of plastic spacers	SACSP625X250-12				1				

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	ct Description : ct Code :	Regency Round PREG-52RSRRRRF41					Revised	Sept 20	16	
				Quantit	y require	ed for ins	tallation	(by poo	I size)	
Index#	Description	Part#	Length	12	15	18	21	24	27	30
****	Bag of plastic spacers	SACSP625X250-14					1			
****	Bag of plastic spacers	SACSP625X250-16						1		
****	Bag of plastic spacers	SACSP625X250-18							1	
****	Bag of plastic spacers	SACSP625X250-20								1
	Plastic spacer 0 .625"x 0.50"	SP0625X250		8	10	12	14	16	18	20
**	Hardware bag/wall	1050000054		1	1	1	1	1	1	1
	Thruss phill 18/8 bolts 18/8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31
	Flange nuts S/S 1/4-20 Serrated	2FGS422		31	31	31	31	31	31	31
	DVD Installation	SACWBI36876		1	1	1	1	1	1	1

^{*} In the hardware bag/pool you will find parts: #V12x34

^{**} In the hardware bag/wall you will find parts: #99-0023 $\,$ - #2FGS422 $\,$

^{***} In the hardware bag/pool you will find parts: #VHL12114S

^{****} In the hardware bag/pool you will find parts: #FW10x34S


^{*****} In the bag of platic spacers you will find parts: #SP0625X0250

^{******} In the Cap bag you will find parts: #CAPCH777

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Regency RTR PREG-52RSRSRSF41 Round

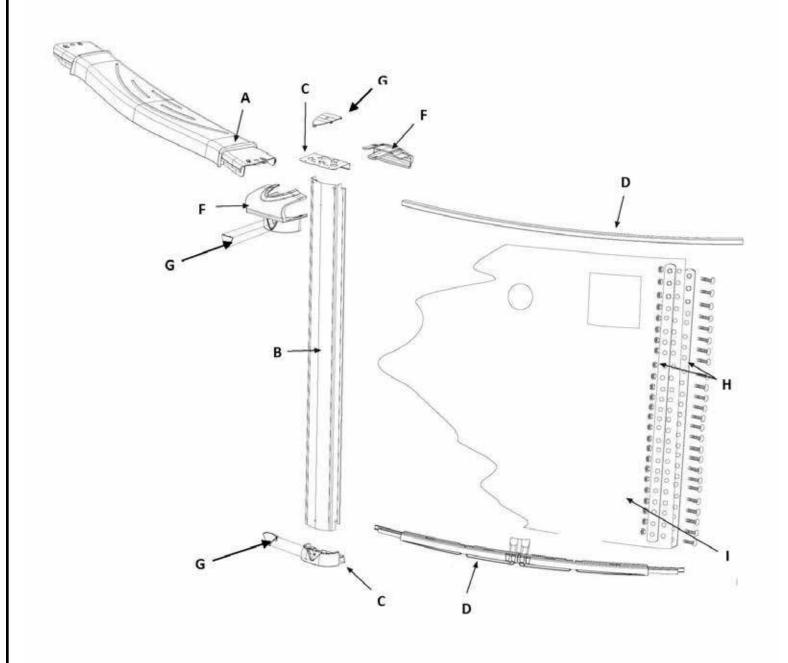

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

Product	Description :	Regency Round PREG-52RSRSRS	SF41					Re	vised Se	pt 2016
Todac	ouc.	T TEG-GETTOTTOTT	7. 4.1						1	į.
Index#	Description	Part #	Length	12	y requir	ed for in	21	24	27	30
A	Top ledge	SD777-001-R	56"	8	10	12	14	16	18	20
В	Upright	MOT777-R10138M	51,750"	8	10	12	14	16	18	20
С	Bottom plate	CB777-26300A	31,730	8	10	12	14	16	18	20
C	Top plate	20668A		8	10	12	14	16	18	20
D	Bottom rail	1525515		8	10	12		10	10	20
D	Bottom rail	1525524		<u> </u>	10	12	14	16	18	
D	Bottom rail	1525530		_		12		10	10	20
D	Stabilizer 12' dia.	LA1255612	55,750"	8						
D	Stabilizer 15' dia.	LA1255615	55,875"		10					
D	Stabilizer 18' dia.	LA1255618	55,875"			12				
D	Stabilizer 21' dia.	LA1255621	55,750"				14			
D	Stabilizer 24' dia.	LA1255624	56,125"					16		
D	Stabilizer 27' dia.	LA1255627	55,688"						18	
D	Stabilizer 30' dia.	LA1255630	56,000"							20
F	Ledge cover	CB777-26100AB		8	10	12	14	16	18	20
G	Bag of caps plugs	SACCAPCH777-08		1						
G	Bag of caps plugs	SACCAPCH777-10			1					
G	Bag of caps plugs	SACCAPCH777-12				1				
G	Bag of caps plugs	SACCAPCH777-14					1			
G	Bag of caps plugs	SACCAPCH777-16						1		
G	Bag of caps plugs	SACCAPCH777-18							1	
G	Bag of caps plugs	SACCAPCH777-20								1
Н	Steel bar	11825	54,000"	2	2	2	2	2	2	2
J	Wall		ĺ	1	1	1	1	1	1	1
	Kit 3 plug Inspiration	CAPCH777		8	10	12	14	16	18	20
*	Hardware bag/pool	SACV12X34-20	#12 screws 3/4		2					
*	Hardware bag/pool	SACV12X34-33	#12 screws 3/4	1						
*	Hardware bag/pool	SACV12X34-49	#12 screws 3/4			1				
*	Hardware bag/pool	SACV12X34-58	#12 screws 3/4				1			
*	Hardware bag/pool	SACV12X34-66	#12 screws 3/4					1		
*	Hardware bag/pool	SACV12X34-74	#12 screws 3/4						1	
*	Hardware bag/pool	SACV12X34-86	#12 screws 3/4							1
	Screw 12x3/4	V12x34		33	40	49	58	66	74	86
***	Hardware bag/pool	SACVHL12114-42	#12 screws 1 1/4	1						
***	Hardware bag/pool	SACVHL12114-53	#12 screws 1 1/4		1					
***	Hardware bag/pool	SACVHL12114-63	#12 screws 1 1/4			1				
***	Hardware bag/pool	SACVHL12114-74	#12 screws 1 1/4				1			
***	Hardware bag/pool	SACVHL12114-84	#12 screws 1 1/4	-				1		
***	Hardware bag/pool	SACVHL12114-95	#12 screws 1 1/4						1	
***	Hardware bag/pool	SACVHL12114-105	#12 screws 1 1/4	-						1
	Screw 12x1-1/4S	VHL12x114S		42	53	63	74	84	95	105
	Plastic spacer bag	SACSP625X250-8		1						
	Plastic spacer bag	SACSP625X250-10			1					
	Plastic spacer bag	SACSP625X250-12				1				
	Plastic spacer bag	SACSP625X250-14					1			
	Plastic spacer bag	SACSP625X250-16						1		

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : t Code :	41	Revised Sept 201										
				Quantity required for installation (by pool size)									
Index#	Description	Part #	Length	12	15	18	21	24	27	30			
	Plastic spacer bag	SACSP625X250-18							1				
	Plastic spacer bag	SACSP625X250-20								1			
**	Hardware bag/wall	1050000054		1	1	1	1	1	1	1			
	Thruss phill 18-8 bolts 18-8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31			
	Flange nuts S/S 1/4- 20 Serrated	2FGS422		31	31	31	31	31	31	31			
	DVD Intallation	SACWBI36876		1	1	1	1	1	1	1			

^{*} In the hardware bag/pool you will find parts: #V12x34


^{**} In the hardware bag/wal you will find parts: #99-0023 - #2FGS422

^{***} In the hardware bag/pool you will find parts: #VHL12114S

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Regency STR PREG-52SSPSRSF41 Round

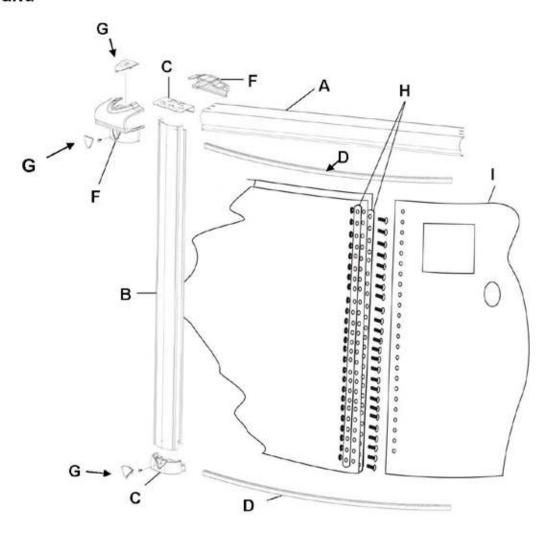

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

ndex#			SF41								
				Quanti	ty requi	ired for	installat	tion (by	pool siz	e)	
Δ	Description	Part #	Length	8	12	15	18	21	24	27	30
M	Top ledge 30"	SDT776-1296130	30,000"	10							
	Top ledge 50"	SDT776-1296150	50,375"		9						
	Top ledge 52"	SDT776-1296152	51,750"			11					Т
	Top ledge 56"	SDT776-1296156	56,375"				12	14	16	18	20
	Upright 52"	MOT777-R10138M	51,750''	10	9	11	12	14	16	18	20
	Bottom plate	CB777-26300A	/	10	9	11	12	14	16	18	20
	Top plate	20668A		10	9	11	12	14	16	18	20
12000	Stabilizer/Bottom rail 8'	LA1254108	30,000"	20	_						-
	Stabilizer/Bottom rail 12' dia.	LA1254112	49,750"	20	18						
	Stabilizer/Bottom rail 15' dia.	LA1254115	50,974"			22					
- 2	Stabilizer/Bottom rail 18' dia.	LA1255618	55,875"				24				
	Stabilizer/Bottom rail 21' dia.	LA1255621	55,750"					28			
10000	Stabilizer/Bottom rail 24' dia.	LA1255624	56,125"						32		
	Stabilizer/Bottom rail 27' dia.	LA1255627	55,688''							36	
	Stabilizer/Bottom rail 30' dia.	LA1255630	56,000''								40
F	Ledge cover	CB777-26100AB		10	9	11	12	14	16	18	20
G	Bag of caps plugs	SACCAPCH777-10		1							
G	Bag of caps plugs	SACCAPCH777-09			1						
G	Bag of caps plugs	SACCAPCH777-11				1					
	Bag of caps plugs	SACCAPCH777-12					1				
	Bag of caps plugs	SACCAPCH777-14						1			
	Bag of caps plugs	SACCAPCH777-16							1		
	Bag of caps plugs	SACCAPCH777-18								1	
	Bag of caps plugs	SACCAPCF777-20									1
_	Steel bar	11823	52,000"	2	2	2	2	2	2	2	2
	Steel wall		,	1	1	1	1	1	1	1	1
	Hardware bag/pool	SACV12X34-98	12 SCREWS 3/4"	1							
	Hardware bag/pool	SACV12X34-86	12 SCREWS 3/4"	_	1						Г
	Hardware bag/pool	SACV12X34-102	12 SCREWS 3/4"			1					\vdash
	Hardware bag/pool	SACV12X34-113	12 SCREWS 3/4"			Ĺ	1				
	Hardware bag/pool	SACV12X34-129	12 SCREWS 3/4"	_				1			\vdash
-	Hardware bag/pool	SACV12X34-147	12 SCREWS 3/4"	_				<u> </u>	1		\vdash
$\overline{}$	Hardware bag/pool	SACV12X34-169	12 SCREWS 3/4"	-	\vdash				_	1	\vdash
	Hardware bag/pool	SACV12X34-184	12 SCREWS 3/4"	_						1	1
_	Screw 12x3/4	V12x34	12 JUNE VV3 3/4	98	86	102	113	129	147	169	18
	Hardware bag/wall	1050000054		1	1	102	1	1	1	109	1

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	et Description: et Code:	und F41						Rev	rised Se	pt 2016			
68				Quantity required for installation (by pool size)									
Index#	Description	Part #	Length	8	12	15	18	21	24	27	30		
	Thruss phill 18/8 bolts												
	18/8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31	31		
	Flange nuts S/S 1/4-20												
	Serrated	2FGS422		31	31	31	31	31	31	31	31		
	Instruction DVD	SACWBI36876		1	1	1	1	1	1	1	1		


^{*} In the harwdare bag/pool you will find parts: #V12x34

^{**} In the hardware bag/wall you will find parts: #99-0023 - #2FGS422

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Regency RTR PREG-54RSPSRSF41 Round

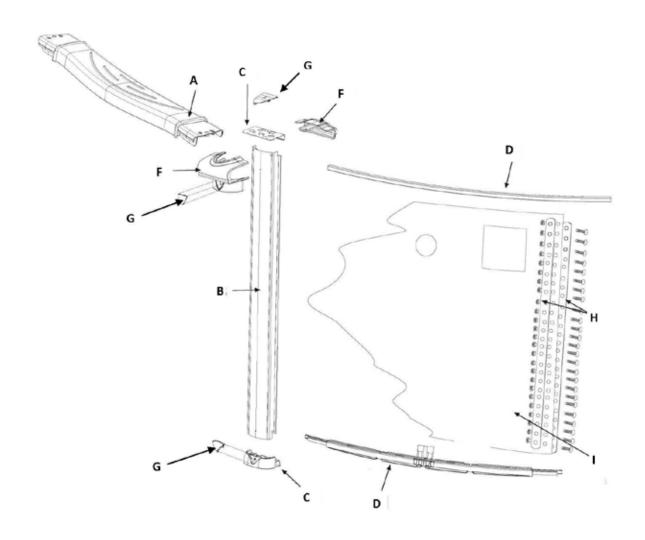

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : t Code :	Regency Round PREG-54RSPSR	SF41							ept 2016	
	50000000000000000000000000000000000000			Quantit	y require	d for inst	allation (by pool s	size)		
ndex#	Description	Part #	Length	12	15	18	21	24	27	30	33
Α	Top ledge	SD777-001-R	56"	8	10	12	14	16	18	20	22
В	Upright	MOT877-R10138M		8	10	12	14	16	18	20	22
С	Bottom plate	CB777-26300A		8	10	12	14	16	18	20	22
С	Top plate	20668A		8	10	12	14	16	18	20	22
D	Stabilizer /Bottom rail 12'	LA1255612	55,750"	16							
D	Stabilizer 15' dia.	LA1255615	55,875"		20						
D	Stabilizer 18' dia.	LA1255618	55,875"			24					
D	Stabilizer 21' dia.	LA1255621	55,750"				28				
D	Stabilizer 24' dia.	LA1255624	56,125"					32			
D	Stabilizer 27' dia.	LA1255627	55,688"						36		
D	Stabilizer 30' dia.	LA1255630	56,000"							40	44
F	Ledge cover	CB777-26100AB	,	8	10	12	14	16	18	20	22
Н	Steel bar	11825	54,000''	2	2	2	2	2	2	2	2
1	Wall			1	1	1	1	1	1	1	1
G	Bag of caps plugs	SACCAPCH777-08		1							
G	Bag of caps plugs	SACCAPCH777-10			1						
G	Bag of caps plugs	SACCAPCH777-12	3			1					2
G	Bag of caps plugs	SACCAPCH777-14	1.0				1				
G	Bag of caps plugs	SACCAPCH777-16						1			
G	Bag of caps plugs	SACCAPCH777-18							1		
G	Bag of caps plugs	SACCAPCH777-20								1	
G	Bag of caps plugs	SACCAPCH777-22	7								1
	Kit 3 plug Inspiration	CAPCH777		8	10	12	14	16	18	20	22
*	Hardware bag/pool	SACV12X34-25	#12 screws 3/4			1					
*	Hardware bag/pool	SACV12X34-33	#12 screws 3/4		1						
*	Hardware bag/pool	SACV12X34-58	#12 screws 3/4		1					1	
*	Hardware bag/pool	SACV12X34-74	#12 screws 3/4	1							
*	Hardware bag/pool	SACV12X34-86	#12 screws 3/4			1					
*	Hardware bag/pool	SACV12x34-98	#12 screws 3/4								1
*	Hardware bag/pool	SACV12X34-100	#12 screws 3/4								1
*	Hardware bag/pool	SACV12X34-124	#12 screws 3/4							1	
*	Hardware bag/pool	SACV12X34-129	#12 screws 3/4				1				
*	Hardware bag/pool	SACV12X34-147	#12 screws 3/4					1			
*	Hardware bag/pool	SACV12X34-164	#12 screws 3/4						1		
	Screw 12x3/4	V12x34	= 1 ¹	74	91	111	129	147	164	182	198
	Screw 12x1-1/4S	VHL12x114S		8	10	12	14	16	18	20	22
	Plastic spacer bag	SACSP625X250-8		1							
	Plastic spacer bag	SACSP625X250-10			1						1
	Plastic spacer bag	SACSP625X250-12				1					1
	Plastic spacer bag	SACSP625X250-14					1				
	Plastic spacer bag	SACSP625X250-16						1			
	Plastic spacer bag	SACSP625X250-18	9	F		1			1		
	Plastic spacer bag	SACSP625X250-20								1	
**	Hardware bag/wall	1050000054		1	1	1	1	1	1	1	1
	Thruss phill 18-8 bolts 18- 8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31	31

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

	t Description : t Code :	Regency Round PREG-54RSPSRS					R	evised Se	ept 2016					
					Quantity required for installation (by pool size)									
Index#	Description	Part#	Length	12	15	18	21	24	27	30	33			
	Flange nuts S/S 1/4-20 Serrated	2FGS422	***	31	31	31	31	31	31	31	31			
	DVD Intallation	SACWBI36876		1	1	1	1	1	1	1	1			

^{*} In the hardware bag/pool you will find parts: #V12x34


^{**} In the hardware bag/wal you will find parts: #99-0023 - #2FGS422

^{***} In the hardware bag/pool you will find parts: #VHL12114S

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Regency RTR PREG-54RSRRRRF49 Round

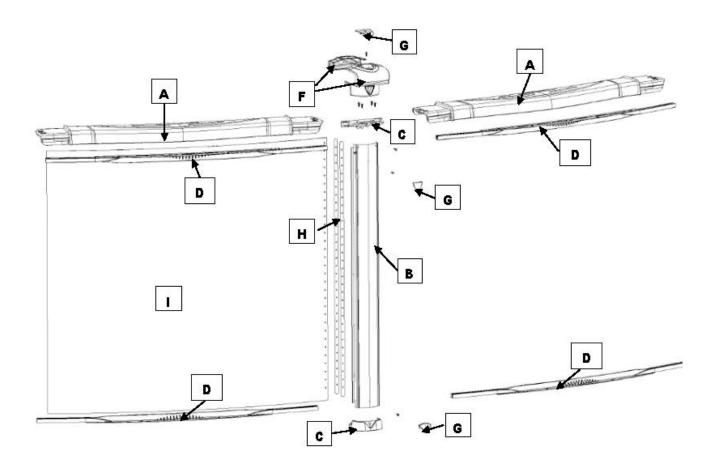

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - CONTENT

	ct Description : ct Code :	Regency Round PREG-54RSRRRF	RF49					Revised	Sept 201	16
				Quantit	y require	d for inst		-		
Index#	The second secon	Part #	Length	12	15	18	21	24	27	30
Α	Top ledge	SD777-001-R	56"	8	10	12	14	16	18	20
В	Upright	MOT877-R10138M	53,750"	8	10	12	14	16	18	20
С	Bottom plate	CB777-26300A		8	10	12	14	16	18	20
С	Top plate	CG20668A		8	10	12	14	16	18	20
D	Stabilizer/Bottom rail	1525515	54,125"	16	20					
D	Stabilizer/Bottom rail	1525524	55-1/4"			24	28	32	36	
D	Stabilizer/Bottom rail	1525530	55-1/4"							40
F	Ledge cover	CB777-26100AB	,	8	10	12	14	16	18	20
G	Caps bag	SACCAPCH777-08		1						
G	Caps bag	SACCAPCH777-10			1					
G	Caps bag	SACCAPCH777-12				1				
G	Caps bag	SACCAPCH777-14					1			
G	Caps bag	SACCAPCH777-16						1		
G	Caps bag	SACCAPCH777-18							1	
G	Caps bag	SACCAPCH777-20								1
Н	Steel bar	11823	52,000"	2	2	2	2	2	2	2
1	Wall			1	1	1	1	1	1	1
*****	Kit 3 caps	CAPCH777		8	10	12	14	16	18	20
*	Hardware bag/pool	SACV12X34-33	# 12 screws 3/4"	1						
*	Hardware bag/pool	SACV12X34-49	# 12 screws 3/4"		1	1				
*	Hardware bag/pool	SACV12X34-58	# 12 screws 3/4"				1			
*	Hardware bag/pool	SACV12X34-66	# 12 screws 3/4"		-			1		
*	Hardware bag/pool	SACV12X34-74	# 12 screws 3/4"						1	
*	Hardware bag/pool	SACV12X34-86	# 12 screws 3/4"							1
	Screw 12x3/4	V12x34		33	49	49	58	66	74	86
***	Hardware bag/pool	SACVHL12114-42	#12 1-1/4 pan washer	1						
***	Hardware bag/pool	SACVHL12114-53	#12 1-1/4 pan washer		1					
***	Hardware bag/pool	SACVHL12114-63	#12 1-1/4 pan washer			1				
***	Hardware bag/pool	SACVHL12114-74	#12 1-1/4 pan washer				1			
***	Hardware bag/pool	SACVHL12114-84	#12 1-1/4 pan washer		12			1		
***	Hardware bag/pool	SACVHL12114-95	#12 1-1/4 pan washer						1	
***	Hardware bag/pool	SACVHL12114-105	#12 1-1/4 pan washer							1
	Screw 12x1-1/4	VHL12x114S		42	53	63	74	84	95	105
****	Hardware bag/pool	SACFW10X34S-35	10 x 3/4 flat washer	1						
****	Hardware bag/pool	SACFW10X34S- 45	10 x 3/4 flat washer		1					
****	Hardware bag/pool	SACFW10X34S- 50	10 x 3/4 flat washer			1				
****	Hardware bag/pool	SACFW10X34S- 60	10 x 3/4 flat washer				1			
****	Hardware bag/pool	SACFW10X34S- 65	10 x 3/4 flat washer			9		1		
****	Hardware bag/pool	SACFW10X34S- 75	10 x 3/4 flat washer						1	
****	Hardware bag/pool	SACFW10X34S- 85	10 x 3/4 flat washer							1
	Flat washer	FW10x34S		35	45	50	60	65	75	85
****	Bag of plastic spacers	SACSP625X250-8		1						
*****	Bag of plastic spacers	SACSP625X250-10			1					
****	Bag of plastic spacers	SACSP625X250-12				1				

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - CONTENT

	ct Description : ct Code :	Regency Round PREG-54RSRRRRF4	9	0-0				Revised	Sept 201	16
				Quantity	y require	d for inst	tallation	(by pool	size)	
Index#	Description	Part#	Length	12	15	18	21	24	27	30
****	Bag of plastic spacers	SACSP625X250-14					1			
****	Bag of plastic spacers	SACSP625X250-16		1				1		
****	Bag of plastic spacers	SACSP625X250-18							1	
****	Bag of plastic spacers	SACSP625X250-20								1
	Plastic spacer 0 .625"x 0.50"	SP0625X250		8	10	12	14	16	18	20
**	Hardware bag/wall	1050000054		1	1	1	1	1	1	1
	Thruss phill 18/8 bolts 18/8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31
	Flange nuts S/S 1/4-20 Serrated	2FGS422		31	31	31	31	31	31	31
	Plastic coping	10296		10	12	15	17	19	22	24
	DVD Installation	SACWBI36876		1	1	1	1	1	1	1

^{*} In the hardware bag/pool you will find parts: #V12x34

^{**} In the hardware bag/wall you will find parts: #99-0023 - #2FGS422

^{***} In the hardware bag/pool you will find parts: #VHL12114S

^{****} In the hardware bag/pool you will find parts: #FW10x34S


^{*****} In the bag of platic spacers you will find parts: #SP062 5X02 50

^{******} In the Cap bag you will find parts: #CAPCH777

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - EXPLODED VIEW

Regency LX RTR PREGLX-52RSRRRRF41 Round

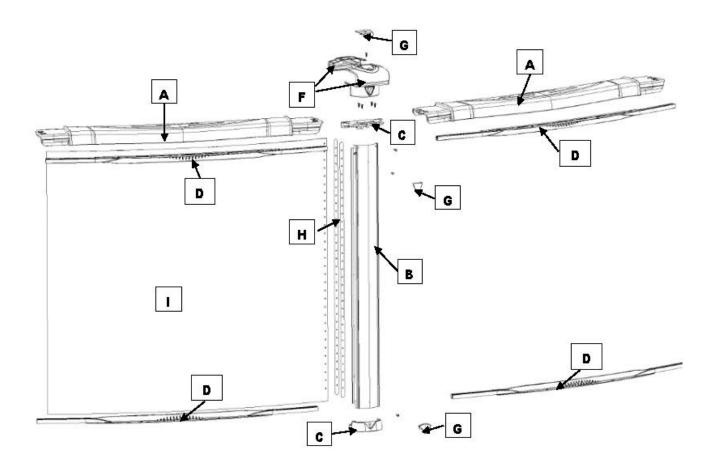

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - CONTENT

	ct Description : ct Code :	Regency LX Roun PREGLX-52RSRR						Revised	Sept 20	16
				Quantit	y requir	ed for in	stallatio	n (by po	ol size)	
Index#	Description	Part #	Length	12	15	18	21	24	27	30
Α	Top ledge	CC777-001-R		8	10	12	14	16	18	20
В	Upright	MOT777-R10138M	51,750"	8	10	12	14	16	18	20
С	Bottom plate	CB777-26300A		8	10	12	14	16	18	20
С	Top plate	CG20668A		8	10	12	14	16	18	20
D	Stabilizer/Bottom rail	1525515	54,125"	16	20					
D	Stabilizer/Bottom rail	1525524	55-1/4"			24	28	32	36	
D	Stabilizer/Bottom rail	1525530	55-1/4"							40
F	Ledge cover	CB777-26100AB	Problem 2 of a State (1)	8	10	12	14	16	18	20
G	Caps bag	SACCAPCH777-08		1						
G	Caps bag	SACCAPCH777-10			1					
G	Caps bag	SACCAPCH777-12				1				
G	Caps bag	SACCAPCH777-14					1			
G	Caps bag	SACCAPCH777-16						1		
G	Caps bag	SACCAPCH777-18							1	
G	Caps bag	SACCAPCH777-20								1
Н	Steel bar	11823	52,000"	2	2	2	2	2	2	2
T	Wall		940 HVO # 0400 VIII - 12	1	1	1	1	1	1	1
*****	Kit 3 caps	CAPCH777		8	10	12	14	16	18	20
*	Hardware bag/pool	SACV12X34-33	# 12 screws 3/4"	1						
*	Hardware bag/pool	SACV12X34-49	# 12 screws 3/4"		1	1				
*	Hardware bag/pool	SACV12X34-58	# 12 screws 3/4"				1			
*	Hardware bag/pool	SACV12X34-66	# 12 screws 3/4"					1		
*	Hardware bag/pool	SACV12X34-74	# 12 screws 3/4"						1	
*	Hardware bag/pool	SACV12X34-86	# 12 screws 3/4"							1
	Screw 12x3/4	V12x34	Table comments comments and an interesting an interesting and an interesting an interesting an interesting and an interesting an interesting an interesting an interesting an interesting an interesting and an interesting and an interesting and an interesting an interesting an interesting an interesting and an interesting an	33	49	49	58	66	74	86
***	Hardware bag/pool	SACVHL12114-42	#12 1-1/4 pan washer	1						
***	Hardware bag/pool	SACVHL12114-53	#12 1-1/4 pan washer		1					
***	Hardware bag/pool	SACVHL12114-63	#12 1-1/4 pan washer			1				
***	Hardware bag/pool	SACVHL12114-74	#12 1-1/4 pan washer				1			
***	Hardware bag/pool	SACVHL12114-84	#12 1-1/4 pan washer			\vdash		1		
***	Hardware bag/pool	SACVHL12114-95	#12 1-1/4 pan washer						1	
***	Hardware bag/pool	SACVHL12114-105	#12 1-1/4 pan washer							1
	Screw 12x1-1/4	VHL12x114S		42	53	63	74	84	95	
****	Hardware bag/pool	SACFW10X34S-35	10 x 3/4 flat washer	1						
****	Hardware bag/pool	SACFW10X34S- 45	10 x 3/4 flat washer		1					
****	Hardware bag/pool	SACFW10X34S- 50	10 x 3/4 flat washer			1				
****	Hardware bag/pool	SACFW10X34S- 60	10 x 3/4 flat washer				1			
****	Hardware bag/pool	SACFW10X34S- 65	10 x 3/4 flat washer					1		
****	Hardware bag/pool	SACFW10X34S- 75	10 x 3/4 flat washer						1	
****	Hardware bag/pool	SACFW10X34S- 85	10 x 3/4 flat washer							1
	Flat washer	FW10x34S	-	35	45	50	60	65	75	85
****	Bag of plastic spacers	SACSP625X250-8		1						
*****	Bag of plastic spacers	SACSP625X250-10			1				_	$ldsymbol{ldsymbol{eta}}$
****	Bag of plastic spacers	SACSP625X250-12				1				

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

PARTS LISTING - CONTENT

	ct Description : ct Code :	Regency LX Round PREGLX-52RSRRRR	F41					Revised	l Sept 20	16
				Quantit	y requir	ed for in	stallatio	n (by po	ol size)	
Index#	Description	Part#	Length	12	15	18	21	24	27	30
****	Bag of plastic spacers	SACSP625X250-14					1			
****	Bag of plastic spacers	SACSP625X250-16						1		
****	Bag of plastic spacers	SACSP625X250-18							1	
****	Bag of plastic spacers	SACSP625X250-20								1
	Plastic spacer 0 .625"x 0.50"	SP0625X250		8	10	12	14	16	18	20
**	Hardware bag/wall	1050000054		1	1	1	1	1	1	1
	Thruss phill 18/8 bolts 18/8 1/4-0x3/4	99-0023		31	31	31	31	31	31	31
	Flange nuts S/S 1/4-20 Serrated	2FGS422		31	31	31	31	31	31	31
	DVD Installation	SACWBI36876		1	1	1	1	1	1	1

^{*} In the hardware bag/pool you will find parts: #V12x34

^{**} In the hardware bag/wall you will find parts: #99-0023 - #2FGS422

^{***} In the hardware bag/pool you will find parts: #VHL12114S

^{****} In the hardware bag/pool you will find parts: #FW10x34S

^{*****} In the bag of platic spacers you will find parts: #SP0625X0250

^{******} In the Cap bag you will find parts: #CAPCH777

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

READ ALL INSTRUCTIONS CAREFULLY

The approximate time it takes for installation, excluding earthworks and filling is about 1/2 day. You will need at least 3 people to help with installation.


A. DETERMINE THE LOCATION OF YOUR POOL


1. The Terrain

Pay special attention to choosing the right location for your pool:


- Choose a large area, as flat and level as possible and well drained. (Image 1)
- Choose a spot on dry, firm earth (stabilizer or other)—do not install the pool on asphalt, tar or oil based surfaces, gravel, peat moss, wood or chemically treated soil.
- Check with your pool dealer to see if Nut Grass grows in your area. This type of grass may grow up through your pool liner. Your dealer will be able to advise how best to treat the site.
- Sloped areas will need to be made level by digging away high spots, not by filling low spots—be prepared to hire earth-moving equipment if necessary.

 (Images 2a & 2b)
- Ensure the earth is well compacted and a wall is placed to prevent the earth from seeping out. (Image 2a)
- If you need to install partly in the ground, you must contact your dealer to see if this is an option for you and that you meet law requirements in your jurisdiction. (Image 2c)

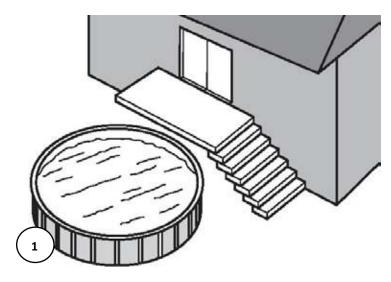

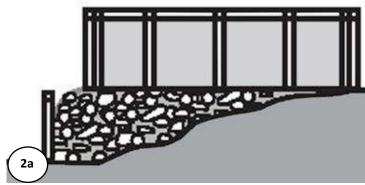



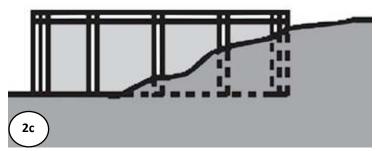



Important Note:

Ground preparation is one of the most important steps in the installation process. A proper foundation will ensure the rest of the pool assembly goes smoothly and that no problems will occur when the pool is filled with water.

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

A. CONT. DETERMINE THE LOCATION OF YOUR POOL

2. Things to Avoid


Do not locate your pool near or on any of the following (Images 3a to 3c):

- Overhanging tree branches.
- Overhead wires and clotheslines.
- Buried pipes and wires. Contact your gas, electric and telephone utilities to find buried pipes and wires before you dig.
- Areas with poor drainage.
- Grass, stones and roots. Grass will rot underneath the pool liner, and stones and roots will damage the pool liner.
- Areas recently treated with oil-based weed killers, chemicals or fertilizers.

3. Plan Ahead

- Will you be adding an adjacent deck later? Be sure to leave room.
- Will you be using pool accessories or other appliances that need electricity or gas? Locate your pool near these services or plan to have them installed later by a licensed contractor.




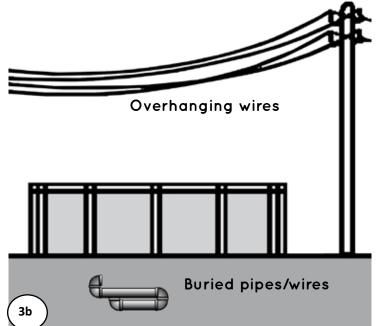



Important Note:

When locating the centre of the pool, be sure to take into consideration any structures (deck, patio, house) or relevant items (change rooms, gazebo, etc.) that the pool may need to line up with and ensure that the pool is in the most visual pleasing location for your property.



GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

A. CONT. DETERMINE THE LOCATION OF YOUR POOL

4. Tools Needed



List of required materials

- Straight wood plank
- Material that provides a permanent base (ex. Crushed stone)
- Fine sand (void of debris)
- Cement blocks (5cm x 20cm x 40cm / 2"x 8"x16") (optional)
- 2x Plywood (60cm x 120cm /2ft x 4ft)
- Wood board (30cm x 20cm / 1ft x 1ft)
- Vinyl covered hooks (to hold wall steady)
- String and stakes & wooden pegs
- Prefabricated cove sections (optional)
- Pool carpeting (optional)
- Rope
- Polyethlyne Plastic Sheeting




• Optical Level Can be useful for precise measurements

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

B. PREPARE THE FOUNDATION OF YOUR POOL

1. Mark out the Area


- a. Drive a peg into the ground at the centre of the area where you want your pool. (Image 1)
- Use a length of string tied between the peg and a can of spray paint, and mark a circle on the ground (a tape measure can also be used). The circle will be 12" (30 cm) bigger all round than the pool. (Image 2)

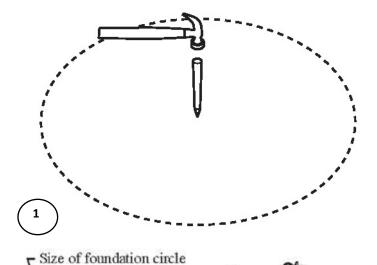

Size of pool

2. Remove the sod

- a. Remove all sod and plants from the circle. (Image 3)
- b. Remove any sticks, stones and roots from the circle using a rake.
- c. To make sure your pool is stable, compact the ground well, use the compactor, before adding the sand.

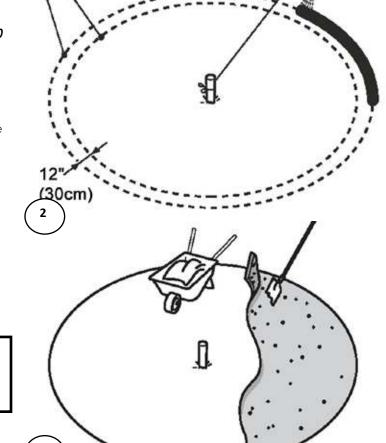



Important Note:


Your pool must be perfectly level. Take the time you need to be sure your foundation is perfectly level.

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION


B. CONT. PREPARE THE FOUNDATION OF YOUR POOL

3. Make the area flat and level

- a. Replace the centre peg with a flat-topped stake, at least 1" (25 mm) square and 6" (15 cm) long. Drive it down flush with the ground surface.
- b. Nail one end of a straight 2-by-4 (5cm x 10cm) wood plank to the top of the stake. Use a nail long enough to hold the end of the 2-by-4 (5cm x 10cm) wood plank to the stake while you rotate it in a circle. (Image 4)

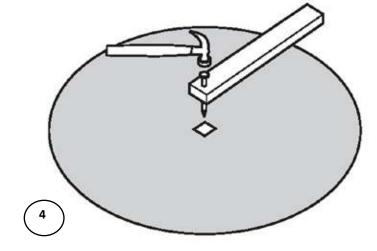

c. Put a carpenter's level on the wood plank and swing the board in a circle to find the high and low spots. (Image 5)

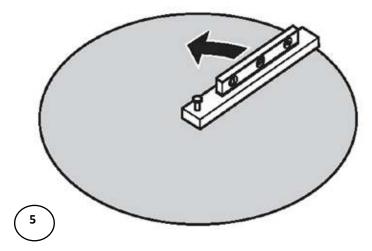


d. Remove all the high spots with a shovel, hoe or rake. (Image 6)



Important Note:

Use the optical level to ensure that the ground is perfectly flat and level.

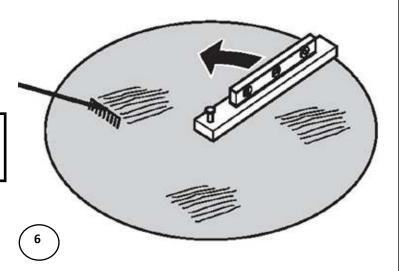

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION


B. CONT. PREPARE THE FOUNDATION OF YOUR POOL


- e. Be prepared to hire earth moving equipment if you need to level a large area. Remember, your pool must be level across the diameter of the pool.


 (Image 7)
- f. Small dips and hollows may be filled in, but the soil must be hard-packed and well compacted with a **tamping tool.**
- g. Take material such as rock dust or fine mortar that can conform a solid, permanent base and deposit this material around the rim of the basin. The material used should be spread around the perimeter of the pool to a width of 24" (60cm) and a thickness of 2" (5cm). (Image 8)

Note: Bottom rails will be placed in the center of the perimeter of the pool see the dashed line. (Image 8)

h. Recheck the outer perimeter of the circle, where the pool wall will be. Compact the ground and make sure there are no high or low spots. The bottom edge of the pool wall must rest flat on the ground and have no gaps under it. (Image 9)

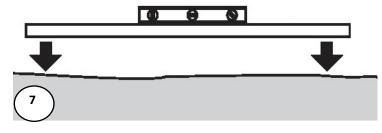

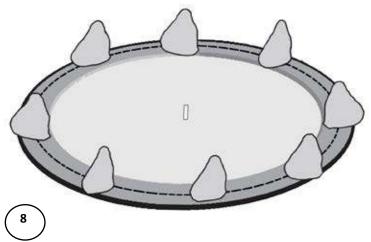

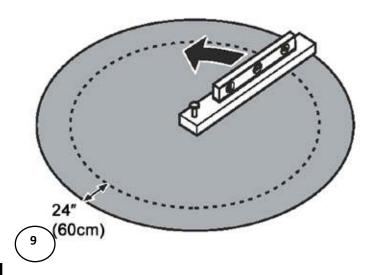




Important Note:

The outer 24" (60cm) of the circle must be perfectly flat. The bottom edge of the pool must rest flat on the ground and have no gaps under it. Take the time you need to be sure this area is perfectly flat and level.

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

B. CONT. PREPARE THE FOUNDATION OF YOUR POOL

- i. Go over the entire perimeter of the pool to ensure that at every 3" the surface is completely level.
- j. Lay out the bottom rails and bottom plates around the circle.
- k. Check the roundness of your circle, by measuring the diameter across in several locations. Since the bottom rails do not automatically form a true circle, **DO NOT SKIP THIS STEP!** Otherwise you might end up with a slightly oval shape, which can cause problems later on. (Image 10)
- Verify the height of each bottom plate with an optical level. They have to be at the same height. Adjust height if necessary.

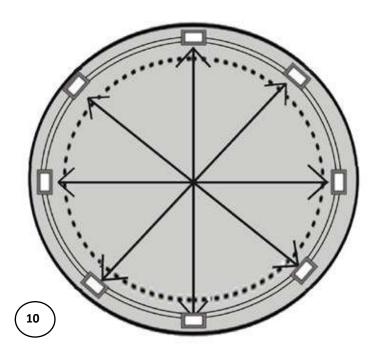




GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

B. CONT. PREPARE THE FOUNDATION OF YOUR POOL

4. Patio Stones (Optional)

- a. Concrete patio stones may be placed at the base of each upright of your pool.
- b. Each bottom plate will show the location for a patio stone. Make a mark in the ground at each base plate. (Image 12)
- c. Remove the bottom rails and bottom plates and lay out the patio stones around the circle where the bottom plates were.
- d. The patio stones must be **sunk** into the ground so the tops are flush with the soil around them. Use the carpenter's level to make sure the patio stones are perfectly level and flush with the ground. Use either the carpenter's level and a 2-by-4 (5cm x 10cm) wood plank, or the optical level between patio stones to make sure the stones are level with each other.
- e. Do not install blocks or rails on loose sifted soil or sand. There must be no space between the ground and the bottom of the rails. All patio blocks **must be flush with the ground**, solid and level with each other in all directions.

NOTE: Installing patio blocks is optional and the blocks may shift due to temperature changes.

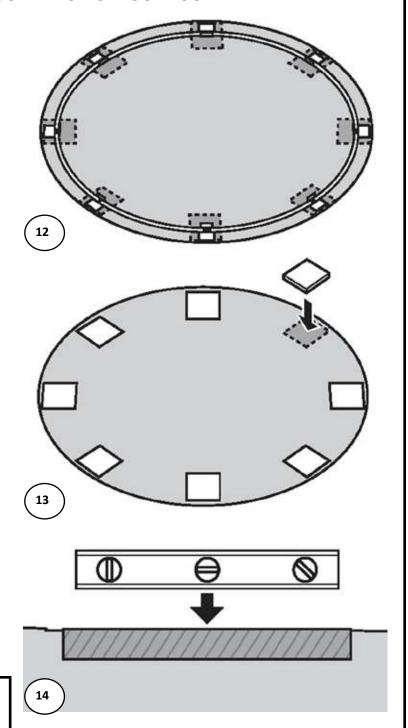



Important Note:

Make sure the patio stones are perfectly level and flush with the ground. All patio blocks must be flush with the ground, solid and level with each other in all directions.

5. Proceed to Section 2 - Assembling the Pool Base

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

ROUND FOOTPRINT - For-SSPSRSF11



- All dimensions
- All dimensions are refer Manufacturers tolerances dimensional variations.
- Actual PSize

 Upright

 Upright

 Bott

 Gap between Bottom Wall Channels 18'-


Pool Name	8	12"	15'	181	21'	24	27'	.08
Uprights	10	9	11	12	14	16	18	20
Radius of Rails	4 '	61	7.5'	, 6	10.5'	12'	13.5'	15'
Gap betweenRails	Infinity 3/16" 11/16"	11/16"	3/8"	11/16" 13/16"	13/16"	7/16"	7/8"	9/16"
Wall PerimeterIndinity 2	^{'injt} 02	454	565	679	792	905	1018	1131
Wall LengthInfinity03	^{nity} 03	455	566	089	793	906	1019	1132

INFINITY ROUND STEEL POOL CHART

are are	om Wa
in ref	a 11
inches uerenced	Channels
are in inches unless otherwise specified are referenced from the wall location. tolerances and field condition may result	—Bottom tracks length: 8'=30", 12'=49.75", 15'= 50.974", om Wall Channels 18'=55.875", 21'-55.75", 24'=56.125", 27'=55.688", 30'=5
therwise e wall :	m trac} 5.875",
e speci locatio may re	ks leng , 21'-
fied. n. sult	gth: 8
	1=30", 24'=
	12"=4
	9.75",
	15 - =55.68
	50.97 8", 3
	4", 0"=5

GENERAL INSTRUCTIONS - ROUND POOLS GROUND PREPARATION

ROUND FOOTPRINT - For - RSRSRSF11/RSRRRRF11

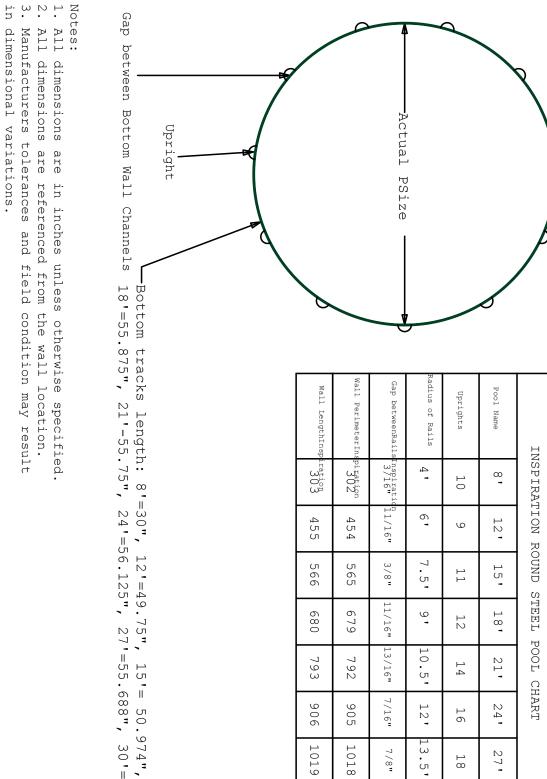

IN	SPIRAT	CION R	OUND S	TEEL I	INSPIRATION ROUND STEEL POOL CHART	ART		
Pool Name	8	12'	15'	181	21'	24"	27'	30'
Uprights	10	9	11	12	14	16	18	20
Radius of Rails	4 '	6'	7.5'	, 6	10.5'	12'	13.5	15'
Gap betweenRails	3/16" 11/16"	ⁿ 11/16"	3/8"	11/16" 13/16"		7/16"	7/8"	9/16"
Wall PerimeterIndpiration	pi gatign	454	565	679	792	905	1018	1131
wall LengthInspiration	iration 303	455	566	089	793	906	1019	1132

•	•	•
Manı	All	ALL
ıfacturers	dimensions	differential are in inches unless otherwise specified
toleı	are	a r
rances	refer	TII TII
and	enced	CHES
field	from	S S D TIID
condition	the wall]	OCHETATSE
may result	Location.	Specifie
	. Manufacturers tolerances and field condition may result	dimensions are referenced from lfacturers tolerances and field

27'=55.688", 30'=56"

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL BASE

A. LAY OUT THE BOTTOM PLATES AND BOTTOM RAILS

1. Lay out bottom plates

a. Place the bottom plates equally spaced around the perimeter of your foundation. If you are using the optional patio stones, depending on your model place one bottom plate on each stone. (Image 1)

2. Assemble bottom plates and bottom rails

NOTE: Depending on your pool model you may have painted steel or resin bottom rails

a. Insert the end of each bottom rail into a bottom plate. Leave a gap between the ends of the bottom rails.


Steel: Image 2 Resin: Image 3

See Diagram:


Please refer to your pool's footprint (Section 1) for gap measurement,

Measure the diameter of your pool all around the circle and make sure it is correct.
 Note: this measurement should be taken from centre to centre of the bottom plate. When the circumference is perfectly round, hammer nails into the ground to keep the bottom rails into place.


These nails are to be removed only at the last stepwhen filling up the pool.

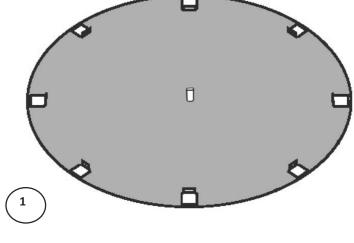



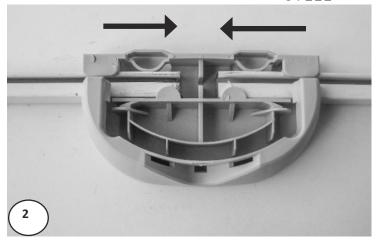


RESIN

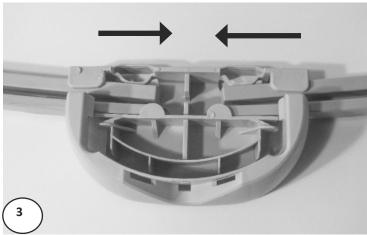



Important Note:

Use a soft measuring tape to measure around the perimeter of the pool. Measure from the inside of the bottom rail, the measurement should equal the wall length.

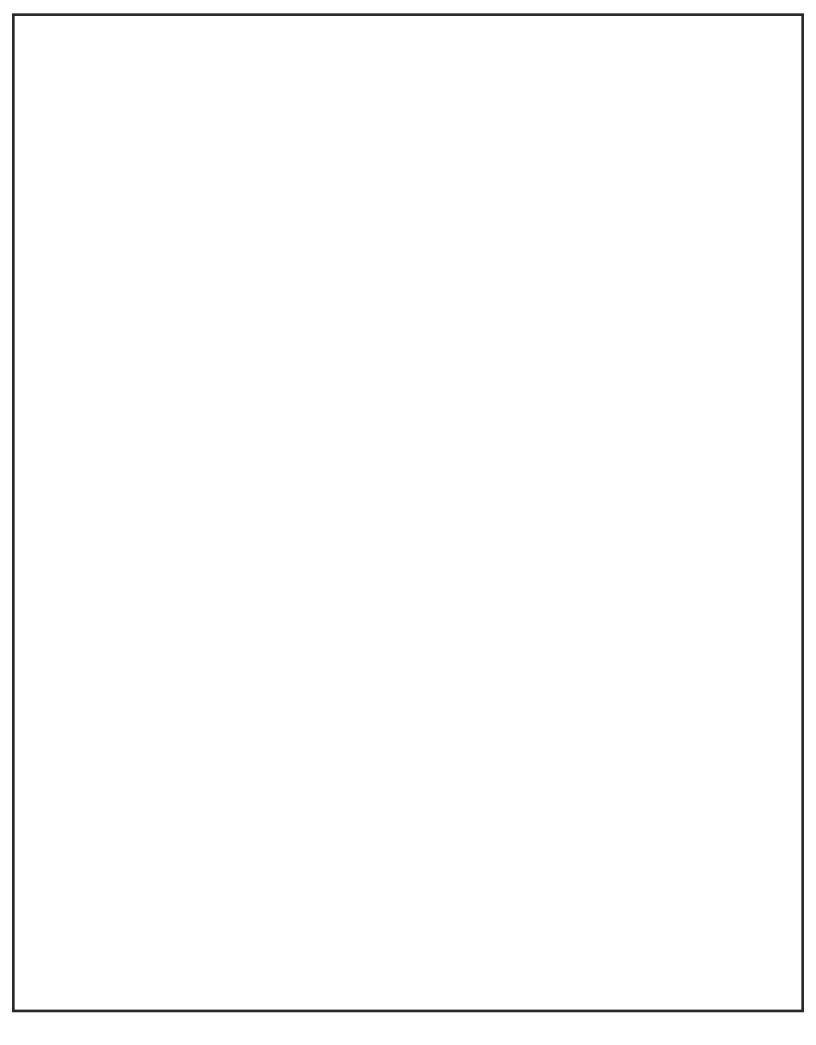

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL


A. SETTING UP THE POOL WALL

Do not attempt to install the pool wall in the wind, wait for a calm day.

It takes at least 3 people to install the pool wall.


1. Preparing for the wall installation

- a. Bring the following items into the middle of the pool foundation before you start uncoiling the pool wall: plywood, some extra sand or fine dirt to make the cove and a ladder to climb out after the wall is assembled.
- b. Make sure the skimmer and water return holes are located where you need them to be. The skimmer and water return holes are positioned towards the end of the wall, (the section before where the wall started).

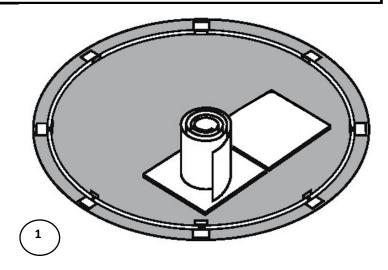

2. Set the pool wall in place

- a. Unpackage the coiled pool wall and stand it on the plywood at the place close to where you need to install the skimmer. (Image 1) (Remember the skimmer and water return holes will be placed at the section just before where you started the wall installation).
- b. Start uncoiling the wall, guiding the bottom edge into the curved bottom rail. The starting end of the wall must be positioned in the centre of a bottom plate, and the skimmer and return holes should be positioned where the pump and filter will be. (Image 2)

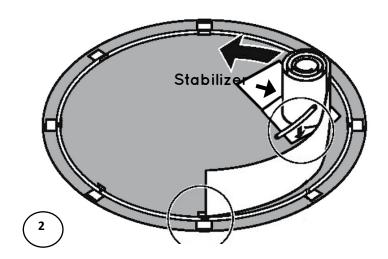

d. Set lengths of stabilizer onto the top edge of the wall as you uncoil it. (Image 2)




Important Note:

It is preferable to use very fine sand that is easily compacted. Be careful not to spill sand on the bottom rails.


GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL

A. SETTING UP THE POOL WALL

c. We also suggest installing vinyl-covered hooks and rope to hold the wall steady. Ideally the help of several people should be solicited to hold the wall in place. Work around the foundation until the entire pool wall is uncoiled into the bottom rails. (Image 3)

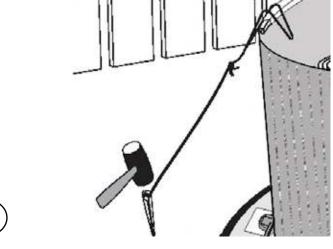

 d. When uncoiling the wall, the skimmer and return holes are positioned toward the end of the wall. (Image 4)

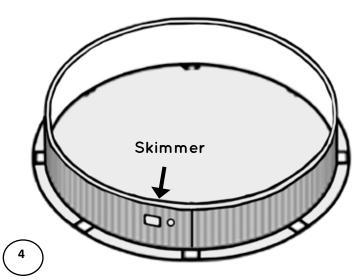



Important Note:

Do not attempt to install the pool wall in the wind. Wait for a calm day.

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL

A. CONT. SETTING UP THE POOL WALL

3. Join the ends of the pool wall

- a. Line up the holes in the two ends of the pool wall.(Image 5)
- b. Now that you have installed the wall you can be faced with three scenarios.
 - 1) The wall joints align perfectly, if so, move on to the next step (c).
 - 2) Your wall appears to be too short. **It is not.** However the space between the bottom rails must be decreased by lightly tapping the bottom plates towards the inside of the pool. You can also tap the wall lightly with both hands in the desired direction. (Image 6)

You **MUST** recheck the gaps at each and every one of the bottom rails so that they are all equal in gap size.

3) Your wall appears too long. **It is not.** However the space between the bottom rails must be increased by tapping the bottom plates lightly towards the outside of the pool or by tapping the wall with both hands in the desired direction. (*Image 7*)

You **MUST** recheck the gaps at each and every one of the bottom rails so that they are all equal in gap size.




Important Note:


Bottom rails must always be held in place in the bottom plate.



Important Note:

You MUST recheck the gaps at each and every one of the bottom rails so that they are all equal in gap size.

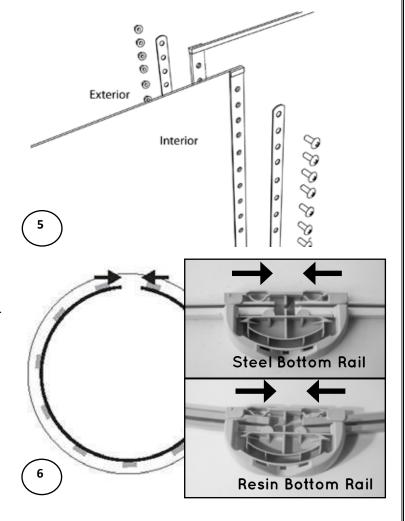

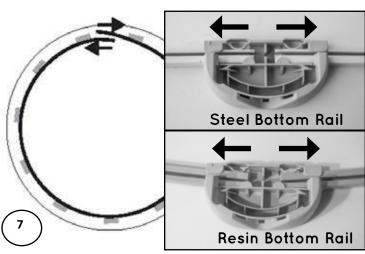

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL

A. CONT. SETTING UP THE POOL WALL

c. To fasten the wall joint, overlap the two steel bars, one on the inside and the other on the outside.

Tighten the mechanical screws on the inside and the nuts on the outside. Ensure that all botls and all the holes are used. (Image 8)



Important Note:

Stick a screwdriver through two of the holes to help line up the ends of the wall.

When tightening the screws start from either the top and go down or vice versa. Do not start a few screws from top and a few from the bottom to meet in the middle, this can cause problems later on.

- d. Adjusting the pool to the proper shape may cause the bottom rails and bottom plates to slip out of alignment a little. Recheck all of the bottom plates to make sure each one is centred where the bottom rails meet.
- e. Cover the seam and bolt heads on the inside/interior of the pool wall completely with 2" (50mm) duct tape. (Image 9)


4. Make sure the pool wall is round


 Using a tape measure, measure across the circle at each bottom plate. The pool wall must be round.
 Adjust the circle by nudging the base plates in or out with your foot. (Image 10)




Important Note:

The pool must be level across the perimeter. A pool that is not level is dangerous and may collapse.

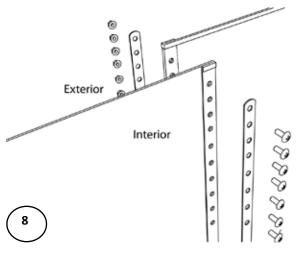

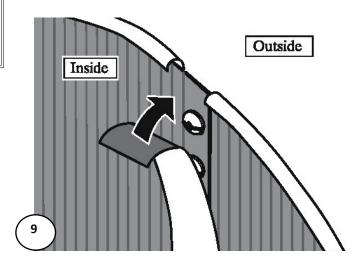

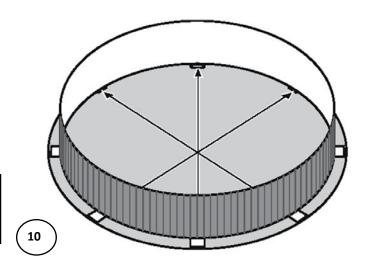



GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL


B. ASSEMBLING THE COVE

1. Make the cove

- a. If you are using sand, bank the sand against the wall to form a cove of 3" to 6" (7.5cm to 15cm) high and 8" to 12" (20cm to 30cm) wide at ground level. This will prevent the liner from creeping under the wall, and it will also protect the liner from any metal edges of the pool framework. THIS STEP IS NOT OPTIONAL, IT MUST BE DONE. (Image 11)
- NOTE: If a smaller cove (less than 3" (7.5cm)) is made along with using a very tight liner, this will buckle the wall.
- b. Water the sand to compact it and use a trowel to spread it evenly. (Image 12)
- c. Since earth containing chemicals can cause discoloration or corrosion, it is suggested that you place **polyethylene plastic sheeting** under the cove around the perimeter of the wall, so no earth comes in contact with the metal. Since the presence of such chemicals is beyond the control of the manufacturer, such damage is not covered under warranty. (Image 13)
- d. If you are using styrofoam cove pieces instead of sand, insert them in the bottom rail and refer to the installation instructions that are provided with them.

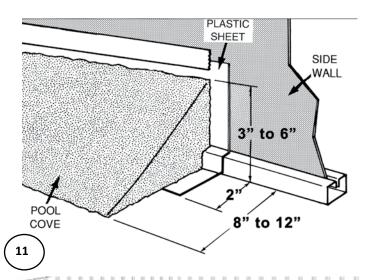

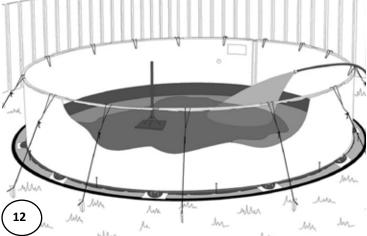

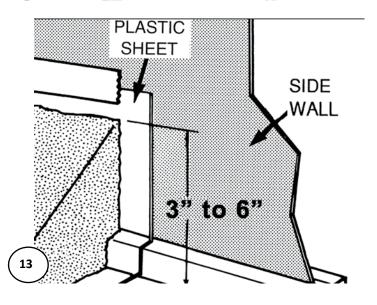



Important Note:

The cove is an important part of the pool structure. Take your time to make a complete, full-size cove.

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL


B. CONT. ASSEMBLING THE COVE

e. A vacuum cleaner can later be used to remove the air from between the liner and the wall. This technique enables you to remove folds in the liner. However the following precautions should be taken:


Do not use an industrial vacuum cleaner which could be too powerful.

Tape the end of the vacuum hose before inserting it into the wall so as not to damage the liner. Insert the nozzle until it is about 4" (10cm) above the cove (insert through the water return outlet or the skimmer depending on the diameter of your hose). Make sure you will be able to remove the hose later on.

Tape the hose to the wall. (Image 14)

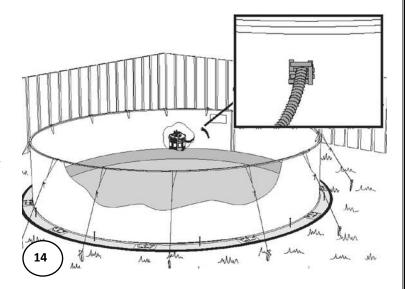

f. Close the skimmer opening with cardboard and adhesive tape so that the suction of air works better.. (Image 15)

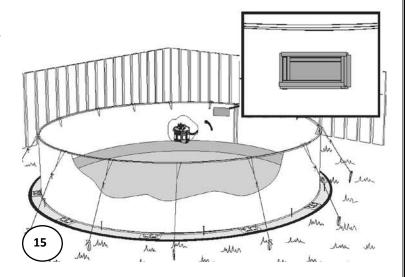


GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL

C. INSTALL THE POOL LINER

1. Set the liner in place

- a. Open the carton. Do not use anything sharp to open the carton.
- b. Unpack and unfold the liner and spread it out in the sun to warm it up. Inspect all the seams and surfaces for holes.
- c. Remove your shoes to avoid damaging the base or tearing the liner.
- d. Spread out the liner, smooth side down. The curved seam should be centred on the cove at the base of the wall. The other seams will form straight lines across the bottom of the pool. (Images 16 & 17)
- e. Smooth out all the wrinkles in the bottom.

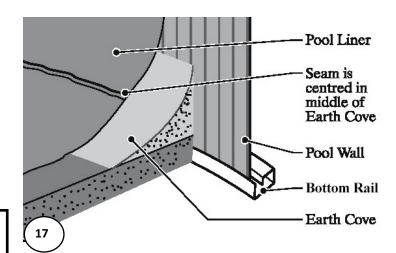

- Curved Seam

Straight Seams




Important Note:

If possible, unfold the liner on the grass one to two hours before installation. Be careful not to leave the liner too long or you may damage the grass.



Nmportant Note:

The liner is generally smaller than the support structure of the pool. It will stretch more easily when warm. It is important that the liner is installed on a warm sunny day. AVOID USING EXTRA COLD WATER AND INSTALLING ON A COLD DAY.



GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL

C. CONT. INSTALL THE POOL LINER

Please ensure to follow instructions that match the type of liner you may have.


2. Fasten the liner place

2-1. For UBEAD/HUNG/J or V-BEAD LINER ONLY (Please see step 2-2. or 2-3. for other liner)

- a. With a V-Bead liner you will not use the plastic coping strips that are packed in the parts carton of your pool. You can discard those pieces, if they are included, as they only apply to pools with overlap liners.
- b. The top of the wall of the liner has what is called a "V-Bead" welded onto it. Simply open up the bead with your fingers and hang it directly on top of the pool wall. When this is done properly, the only portion on the outside of the pool wall is approximately 1" of the V-Bead. No printed liner material is actually going over the top of the wall to the outside of the wall. (Image 16)
- c. Make sure the bead is on evenly around the entire pool, and that the liner is hanging straight down from the top of the wall. The liner should not have creases in it because it is twisting around the pool. If the liner is twisting, it is because it is not sitting properly in the pool. Make necessary adjustments before proceeding.

NOTE: Some liners may fit very tightly, it is better to install uprights, top plate and rail before going onto next step. See Section 4.

Proceed to Section 4 -Installing the Pool Frame

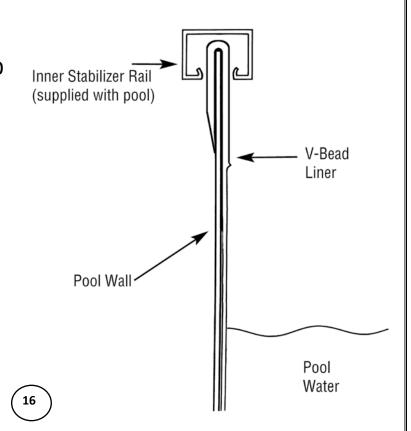

∕In

Important Note:

Do not trim off the excess liner. (If the liner ever needs to be removed, trimming the liner will make re-installation very difficult.) Instead, roll up any excess liner and tape it in place near the top of the pool wall.

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL

C. CONT. INSTALL THE POOL LINER

2-2. For STANDARD/BEADLOCK/SNAPBEAD LINER ONLY

(Please see step 2-1. or 2-3. for other liner)


- a. With a snap bead liner you will **not use the plastic** coping strips that are packed in the parts carton of many pools. You can discard those pieces (if they are included). Instead, you should have received a beaded liner track (referred to as a "coping bead receiver" in *Image 17*).
- b. The beaded liner track should be installed onto the pool wall all of the way around the pool. These pieces should be as close together as possible. Leaving spaces between bead tracks can cause liner problems later on.
- c. Once all of the beaded liner track is on the wall, you can snap the liner bead into the beaded liner track at four random points around the pool. After that is done, and you are satisfied with how the liner is situated within the pool, you can continue snapping the remainder of the liner into place around the pool.
- d. Go around the entire pool again making certain that the liner is securely snapped into the track. This is important to confirm so that the liner does not pull out while under the pressure of being filled with water.
- NOTE: Some liners may fit very tightly, it is better to install uprights, top plate and rail before going onto next step. See Section 4.



Important Note:

Do not trim off the excess liner. (If the liner ever needs to be removed, trimming the liner will make re-installation very difficult). Instead, roll up any excess liner and tape it in place near the top of the pool wall.

3. Proceed to Section 4 - Installing the Pool Frame

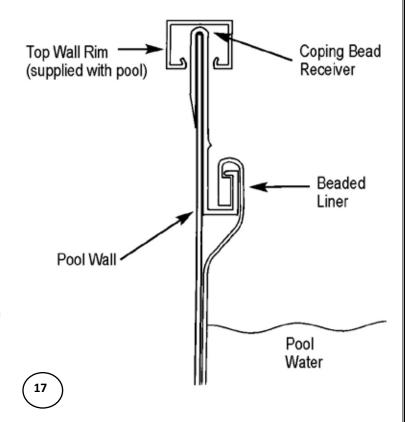



GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL

C. CONT. INSTALL THE POOL LINER

2-3. For OVERLAP ONLY (Please see step 2-1. or 22. for other liner)

- a. Starting at the liner wall seam, hang the liner over the wall making sure that the seam is straight up and down, perpendicular to the floor. (Remove stabilizers gradually as you fold the liner over the top of the wall.) This will assure you that the liner begins going over the wall straight. (Image 18)
- b. As you put the liner over the wall you can secure it by using the plastic coping strips to keep it in place. If you end up with excess material, continue around the pool, pulling excess liner evenly, and distribute over the wall until the excess is gone. (Image 19)
- c. Fasten the liner to the top of the wall with plastic coping. Let the liner hang slack for now. Do not pull the liner tight. (Image 19)
- NOTE: Some liners may fit very tightly, it is better to install uprights, top plate and rail before going onto next step. See Section 4.
- d. Turn the vacuum cleaner on and push the liner outward with your feet to iron out any wrinkles. Once finished, turn off vacuum cleaner.
- e. Start filling the pool with water. As the pool fills, work out all the wrinkles and smooth the liner to the wall. Remove the plastic coping around the top edge of the wall one piece at a time and adjust the liner. Keep smoothing out the wrinkles.

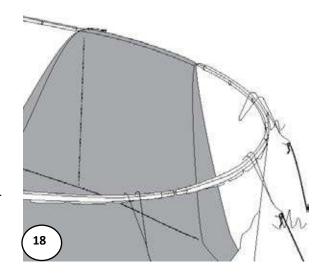

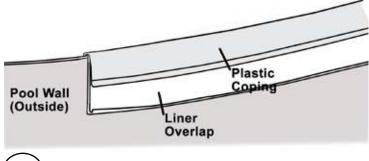

19




Important Note:

Do not trim off the excess liner. (If the liner ever needs to be removed, trimming the liner will make re-installation very difficult). Instead, roll up any excess liner and tape it in place near the top of the pool wall.

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL WALL

C. CONT. INSTALL THE POOL LINER

- f. After all the wrinkles in the liner are removed, trim any extra length of plastic coping so there is no overlap. (Image 20)
- g. Roll up any excess liner hanging below the plastic coping and tape it in place near the top of the pool wall. Important: Do not trim off the excess liner. (Image 21)
- h. Install stabilizers. (Image 22)

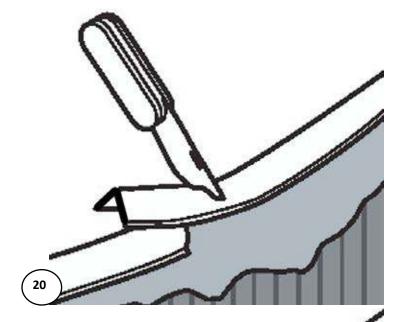





Important Note:

Do not trim off the excess liner. (If the liner ever needs to be removed, trimming the liner will make re-installation very difficult). Instead, roll up any excess liner and tape it in place near the top of the pool wall.

3. Proceed to Section 4 - Installing the Pool Frame

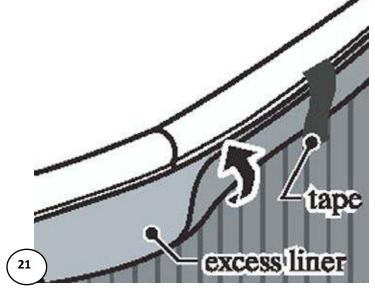

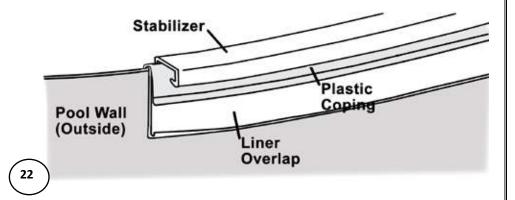

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL FRAME

A. INSTALLATION OF THE UPRIGHTS

1. Install the uprights

- a. The wall joint is hidden behind the upright on most pools. This assures that the skimmer and skimmer return holes are not obstructed.
- b. Insert an upright into the bottom plate. Squeeze each side of the upright at the bottom into the bottom plate. Push firmly on the upright while ensuring that it is completely inserted into the bottom plate. (Image 1)
- c. Attach the bottom of the uprights to the bottom plates using a screw (V12x34). (*Image 2*)
- d. Install the finishing plug. (Image 3)

Proceed with the installation of the uprights.



Important Note:

Use the ridges in the pool wall to make sure the upright column is straight up and down.



Important Note:

Ensure to leave a gap between the two bottom rails.

See Diagram:

Please refer to your pool's footprint (Section 1) for gap measurement.







GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL FRAME

B. INSTALLATION OF THE STABILIZERS AND TOP PLATES

1. Install stabilizers and top plates

NOTE: Depending on your pool model you may have steel or resin top plates.

a. Install the stabilizer on the wall while ensuring to leave a gap between each end. Insert the stabilizer into either side of the top plate.

Steel: Image 4 Resin: Image 6

- b. Position stabilizers and top plates just assembled on top of wall by slightly tapping them with a mallet. Make sure the recessed portion of the top plates lie to the inside of the uprights.
- c. Ensure that the upright is level.
- d. Attach the upright to the top plate using screws (V12x34).

Steel: *Image 5* Resin: *Image 7*


Repeat until you have installed all the stabilizers and top plates.



Important Note:

Ensure to leave a gap between the two stabilizers.



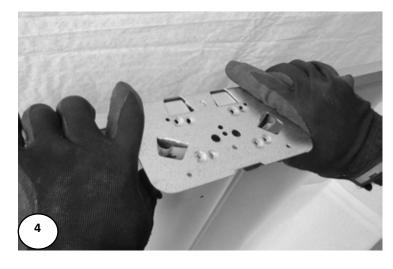





GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL FRAME

C. INSTALLATION OF TOP LEDGE AND LEDGE COVERS

1. Install top ledge

NOTE: Depending on your pool model you may have steel or resin top ledge.

a. Place top ledges on the wall. Align the holes on the top ledges with those on the top plates. Make sure the space left between each top ledge is uniform all around and that the space in question can be covered by a ledge cover. Attach the top ledges to the top plates using screws.


Steel Top Ledge on Steel Top Plate: Image 8 (V12x34) Resin Top Ledge on Steel Top Plate: Image 9(V12x34) Resin Top Ledge on Resin Top Plate: Image 10 (V HL12x114S & FW10x34S)







Important Note:

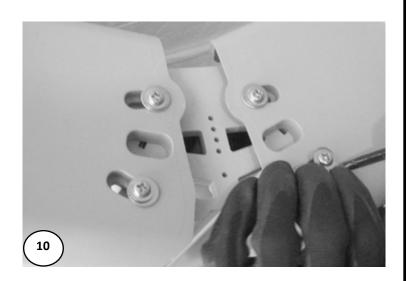

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL FRAME

C. INSTALLATION OF TOP LEDGE AND LEDGE COVERS

2. Install ledge covers (Steel Top Ledge)

NOTE: The following instructions are for Ledge covers being attached to a steel top ledge and steel top plate. Continue to next page step 2.1. Install ledge covers (Resin Top Ledge), if you have resin top ledges.

- a. Place interior ledge cover onto the joiner plate.(Image 11)
- b. Slide the exterior ledge cover into the ledge cover guide. (Image 12)
- c. Attach the interior and the exterior ledge covers to the top plate with a screw (V12x34). (Image 13)

Note: During assembly, the inner and outer components of the ledge cover may have been slipped into each other for packaging purposes.

Please continue to Step 3. Finish Ledge covers, page 7 of this section.



Important Note:







GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL FRAME

C. INSTALLATION OF TOP LEDGE AND LEDGE COVERS


2.1. Install ledge covers (Resin Top Ledge)


NOTE: The following instructions are for Ledge covers being attached to a resin top ledge and steel or resin top plate.

a. Make sure to insert spacer between ledge and ledge covers. Place interior ledge cover onto the joiner plate, on top of spacer.

Steel Top Plate: Images 14 & 15 Resin Top Plate: Images 16 & 17


Note: During assembly, the inner and outer components of the ledge cover may have been slipped into each other for packaging purposes.

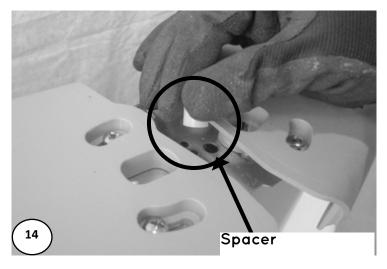


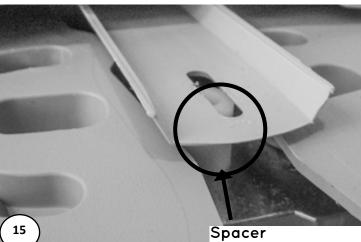



Important Note:

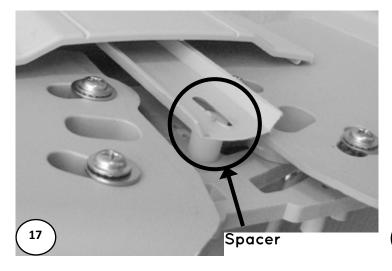

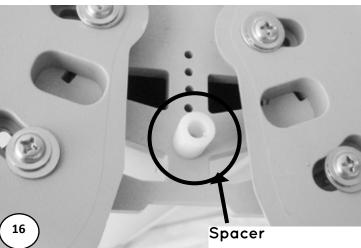

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL FRAME

C. INSTALLATION OF TOP LEDGE AND LEDGE COVERS

- b. Slide the exterior ledge cover into the ledge cover guide. (Image 18)
- c. Align the spacer with ledge cover by using a small screw driver and attach the interior and the exterior ledge covers to the top plate with a screw (VHL12x114S). (Images 19 & 20)

Note: During assembly, the inner and outer components of the ledge cover may have been slipped into each other for packaging purposes.





<u></u> Im

Important Note:



GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL FRAME

C. INSTALLATION OF TOP LEDGE AND LEDGE COVERS

- 3. Finish ledge covers (For both Steel or Resin Top Ledge)
- a. Attach the exterior ledge cover to the upright using a screw (V12x34). (Image 21)
- b. Install the finishing plugs on the ledge cover. (Images 22 & 23)








GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL FRAME

D. FILL YOUR POOL WITH WATER

1. Finish filling the pool

- a. Turn off the vacuum and carefully remove it from the pool.
- b. Fill the pool with water to 2" (5cm) below the lowest opening. Make sure you remove any creases from the liner in the bottom of the pool before the water level gets too high.
- c. While the pool is filling, remove the nails that were holding the bottom rails in place.
- d. Your pool is now installed. You must now install the filter and pump, the skimmer and water return inlet. Please follow the installation instructions that come with these products.



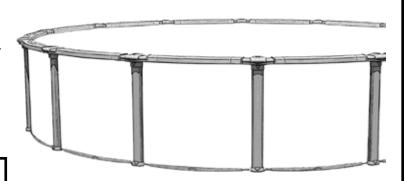



Important Note:

Before making any openings in the liner, fill the pool with 60cm (24") of water to stretch the liner fully. When filling your pool, begin with a garden hose until there is about 30cm (12") of water in the pool. This will allow the liner to stretch gradually. You can then use a heavier flow to finish filling it up.

IMPORTANT:

Make sure that your pool is round, do not assume that by filling up the pool that this will help the pool to place itself into a perfect round circle. Ensure that it is round before filling up the pool with water.


IMPORTANT SAFETY INFORMATION:

Please refer to the safety page at the beginning of this instruction manual. You must follow the rules and information regarding placement of safety stickers on your pool.

GENERAL INSTRUCTIONS - ROUND POOLS ASSEMBLING THE POOL FRAME

E. BASIC FLOW OF SYSTEM

- 1. How the system flow should look like
- a. When assembled your pool should have a basic flow system as in this image, **PLEASE CONTACT YOUR DEALER** for more specific instructions.

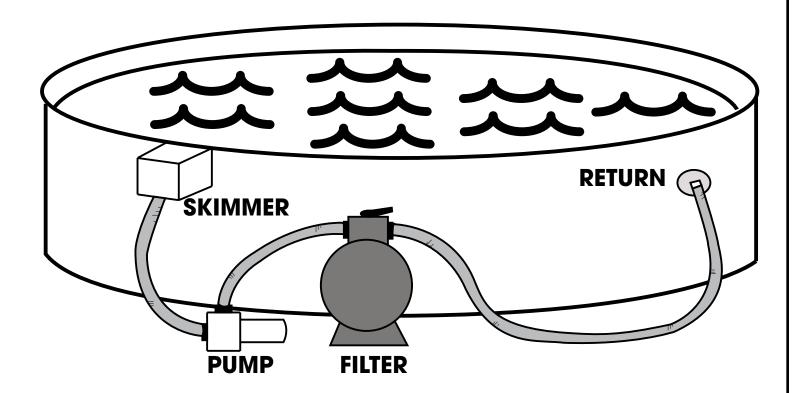

POOL MAINTENANCE MAINTAINING YOUR POOL

POOL MAINTENANCE

Keep your pool wall and frame clean. Always wash away any deposits of pool chemicals which land on the frame of your pool. Wash periodically with a mild soap solution (no abrasives). At least once a year use a clear non-yellowing household wax on all metal components.

Your pool and liner must be inspected regularly for leaks, corrosion, scratches, and punctures. If any problem is found **IMMEDIATE CORRECTIVE ACTION MUST BE TAKEN**. Small repairs and punctures in your liner may be easily repaired using repair kits available at your local dealer. Scratches on your pool wall & frame must be touched up with anti-rust enamel. Wire brush all rust and add a coat of enamel primer followed by a coat of color matching paint. Pool water is full of various caustic chemicals, which will corrode metal parts. If any corrosion is allowed to continue, failure of the pool structure may occur which could result in excessive property damage as well as bodily harm.

The skimmer & return area and below it are particular areas that must be carefully and regularly inspected. If this area is wet, and remains wet for any length of time, it usually means there is a small leak. Skimmer/skimmer return gaskets must be replaced when they become defective. Water must not be permitted to continually run down the wall, if neglected pool will break. If proper skimmer/skimmer return gasket care is not maintained, your warranty will be void!



Important Note:

Be sure to follow all local and state safety regulations when installing any accessory to your pool. Any decks, and all entries, must be carefully monitored for safety and access to pool. Installing any other manufacturer's deck or slide is strictly forbidden!

POOL MAINTENANCE WINTERIZING YOUR POOL

WINTERIZING YOUR POOL

Along with the cool nights of autumn comes the end of the swimming season. During the winter your pool is subject to more stress than in the summer, and any breakage that is caused by incorrect winter procedures is not subject to any warranty with this company.

All of our pools are designed to be left up all winter, but nonetheless are subject to the warranty that was purchased. Continue to chlorinate and filter until the pool is closed down. If you follow our recommendations, you will be able to winterize your pool properly in a few hours.

Properly winterizing your pool will protect it from damage and make it easier for you to reopen it when spring arrives.

The key to fast and easy winterization lies in regular treatment of the water until the start of the cold season, even if you haven't been using the pool.

Routine maintenance becomes easier and less frequent as the water gets cooler. In order to keep the water clean and clear and to prevent the liner from staining, we recommend closing your pool as late as possible, i.e. toward the end of September when the water temperature is about 10°C (50°F).

Waiting until you have finished closing the pool before shutting off the filtration system will prevent hoses still connected from freezing.

Follow the instructions on the following pages or contact your retailer for further information to ensure that you are protecting your pool properly.



POOL MAINTENANCE WINTERIZING YOUR POOL

CLOSING YOUR ABOVE GROUND POOL FOR THE WINTER

At the end of the season, you must follow these directions to make your pool ready for the winter. For areas where water freezes make sure to follow these instructions before the water is frozen, otherwise do not touch the frozen water, this may damage the pool.

STEP 1) PRIOR TO CLOSING

a. Several days prior to closing your pool, test the water for the ph level, total alkalinity, and chloring. The water balance is important to protect the pool from corrosion or scale build-up during winter shut down.

STEP 2) PERFORM A COMPLETE INSPECTION

FINDING LEAKS

- a. Towards the end of the summer season or around mid-August, check for leaks by verifying if the pool's water level is stable. Draw a line on the liner marking the water level and wait 10 days. If after 10 days the level has dropped, then there is a leak. It is important to seal off any leaks you find. Leaks left unsealed when freezing begins can seriously damage your pool and even cause it to collapse.
- b. Vacuum carefully to remove all leaves and debris.

CHECK THE LINER

a. Make sure the top of the liner is still attached to the pool wall. make sure there are no leaks. Repair any liner holes with a vinyl patch: any small punctures in the liner can be easily repaired with underwater repair kits available at your local retailer. Do not remove the liner from the pool, as removal of the liner will void the existing warranty.

CHECK ALL JOINTS AND SCREWS

a. Make sure all the fram joints are fitting together properly and make sure the pool wall has not shifted from the bottom rail. Ensure all screws and bolts are tight.

CHECK FOR RUST

a. Periodically inspect the metal parts of rany corrosion-especially around the skimmer area. If corrosion is found, immediate corrective action must be taken. Wire brush any rust and add a coat of enamel primer followed by a coat of color matching anti-rust enamel paint. Pool structure failure could result in major property damage and bodily harm. Paint any scratches with anti-rust paint.

POOL MAINTENANCE WINTERIZING YOUR POOL

CLOSING YOUR ABOVE GROUND POOL FOR THE WINTER CONTINUED

STEP 3) ADD CLOSING CHEMICALS

- a. To maintain water quality, use a winter kit which contains an algicide and chlorine especially designed for this purpose. When it's time for spring cleaning, this will save you hours of work and reduce the cost of chemicals needed to restore your water quality.
- b. If your pool has a bottom drain, you will have to use pool antifreeze to prevent it from freezing during the winter. Unscrew the hose from the base of the skimmer and attach an extension. Pass the extension over the wall of the pool, making sure it remains well attached. Pour antifreeze into the extension and thread a winterizing plug through the hose (tie a knot at the end of the tube that is to be inserted into the hose). Leave the valve open so that water can drain from the skimmer.

STEP 4) LOWER THE WATER LEVEL

- a. Lower the water level so as to leave between 6 to 20 inches (15cm to 50cm) below the water return. You may plug the return jet hole at this time. **IMPORTANT**DO NOT PLUG THE SKIMMER DRAIN HOLE (located at the base of the skimmer). Remove all hoses attached to the skimmer and return fittings. Do not let water freeze in the skimmer. Leave the skimmer attached to the pool wall and ensure that the skimmer lid is installed. DO NOT DRAIN ALL THE WATER OUT OF THE POOL.
- b. Depending on your area and if the freezing point is more aggressive, for example 50% is frozen into ice, we strongly suggest to lowering the water to lowest point. Depending on how great the deep freeze in your area we suggest you consult with your local dealer about procedures on lowering the water level throughout the winter. We also suggest throughout the autumn season to continually check this level before freezing season starts, as it must not reach the skimmer holes at any time during the winter. Remove any snow which may accumulate on the top ledge.

STEP 5) FILTER PREPARATION

a. Disconnect the hoses from the filter. Remove and store the filter, ladder and all other removable parts from around the pool. The filter should be clear of any foreign objects and water should be removed from the filter and pump. See the manufacturer's instructions. Store the pump in a temperature controlled environment (so that it is not damaged by changes in temperature).

STEP 6) WINTER COVER

- a. For the winter cover we suggest to lower the water level to 1 inch (2.5cm) below the water return. In some areas your dealer may ask you to install it differently in order to protect the pool and the cover. Contact your local dealer to verify the correct procedure for your pool.
- b. If using a winter cover, make sure to place a ball underneath so that rainwater falls into the pool. An accumulation of too much water on the cover could place pressure on the pool, causing damage and invalidating the guarantee. Depending on how great the deep freeze in your area we suggest you consult with your local dealer about procedures on leaving the pool cover throughout the winter.

POOL MAINTENANCE WINTERIZING YOUR POOL

CLOSING YOUR ABOVE GROUND POOL FOR THE WINTER CONTINUED



IMPORTANT

Never let more than 30 cm (1') of snow accumulate on the pool wall; the wall is designed to support the lateral pressure of the pool water, not vertical pressure. With spring thaw, if water leaks from the skimmer or return outlet opening, place a tube at the opening so that the water will run off as far away from the basin of the pool as possible. PLEASE NOTE: Do not strike or hit a frozen pool. This would damage it. Do not disturb the pool till spring. If you have left the winter cover on the pool, make sure to remove accumulated snow after heavy snowfalls.



Important Note:

Whatever the type of valve or extension hose used, you must follow the technique described in this document to close your pool, otherwise your guarantee may be cancelled. Make sure to use antifreeze designed for pools.



Important Note:

An unsealed leak may comprise or cancel the guarantee on your pool.

Never leave water in any of the filtration system components due to the risk of damage during freezing.

POOL MAINTENANCE SPRINGTIME CLEANING OF YOUR POOL

PREPARING YOUR POOL IN THE SPRING

At the end of winter, allow the ice in the pool to thaw completely. When the temperature reaches approximately 10 °C (50 °F), you have to restart your filtration system, since algae and bacterial form more quickly as it gets warmer. Here is how to prepare your pool in a few simple easy steps.

- a. If your pool is equipped with a pool cover, remove the cover and cushion. Carefully remove with a hose any rainwater that has accumulated on the cover so it does not fall into your pool. Clean your cover and cushion and let them dry. Store them in a dry clean place.
- b. Attach the return inlet and skimmer to the filter. Bring the water level up to the middle of the skimmer. Get your filter working. Clean the bottom of the pool with the vacuum, taking care to place the filter in the "waste/drain" position. In this way you will eliminate particles of dirt without disturbing the sand in the filter, and will considerably reduce the need for "backwash rinsing" of the filter.
- c. Now that you have purified the water, you have to test it. It is very important that the pH level of your pool be between 7.6 and 7.8 and the pool's alkaline content be between 80 ppm and 130 ppm. If you are unable to attain these levels, please contact your retailer who will gladly do these tests for you.





Important Note:

Do not drain your pool to clean the water unless absolutely necessary (the water is recyclable). If you do empty your pool, don't leave it empty for too long or expose it to direct sunlight, as the liner may shrink.

POOL MAINTENANCE SPRINGTIME CLEANING OF YOUR POOL

PREPARING YOUR POOL IN THE SPRING CONTINUED

d. When the pH and alkaline levels are ideal, apply a shock-treatment or chlorinate your water. Let it filter for 24 hours and again verify both the pH and free chlorine levels. NOTE: Add chemical products to your pool after sunset, as sunlight rapidly destroys chlorine.

e. Let it filter for several days until the water is clear and the pH and free chlorine levels have stabilized. Add a conditioner/stabilizer by carefully following the manufacturer's instructions. This will stop the chlorine from evaporating quickly in sunlight. Add the quantity of algicide required to prevent algae.


f. You may now begin regular maintenance of your pool. Don't forget to obtain a new set of solutions for your water analysis kit every spring. The old solutions may give false results.

g. Make sure that the skimmer (screws and adapter) is properly in place and tighten the water return fittings to prevent leakage and premature rusting of the pool wall or the lower part of the bottom rail.

HAVE FUN!

IF YOU FOLLOW THESE TIPS AND ASK YOUR DEALER FOR ANY OTHER ADVICE YOU MAY NEED, YOU WILL HAVE ALL THE INFORMATION NECESSARY TO GET YOUR POOL OPERATING AGAIN.

Regency RTR PREGLX-54RSRRRRF41 Round

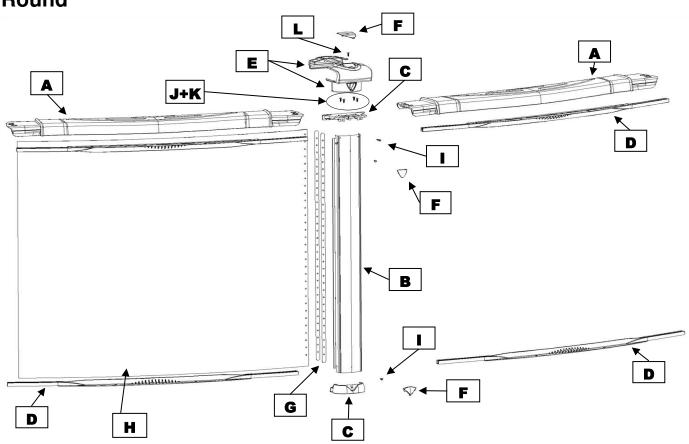

Product Description: Regency Round Revised Sept 2017
Product Code: PREGLX-54RSRRRF41

				Quanti	ty requi	red for i	nstallat	ion (by p	oool size	e)		
Index#	Description	Part #	Length	12	15	18	21	24	27	30	33	
Α	Top ledge	CC777-001-R	56''	8	10	12	14	16	18	20	22	
В	Upright	MOT877-R10138M	53,750"	8	10	12	14	16	18	20	22	
С	Bottom plate	CB777-26300A	•	8	10	12	14	16	18	20	22	
С	Top plate	CG20668A		8	10	12	14	16	18	20	22	
D	Stabilizer/Bottom rail	1525515	54,125"	16	20							
D	Stabilizer/Bottom rail	1525524	55-1/4"			24	28	32	36			
D	Stabilizer/Bottom rail	1525530	55-1/4"							40	44	
E	Ledge cover	CB777-26100AB		8	10	12	14	16	18	20	22	
F	Kit 3 caps	CAPCH777		8	10	12	14	16	18	20	22	
G	Steel bar	11825	54,000''	2	2	2	2	2	2	2	2	
Н	Wall			1	1	1	1	1	1	1	1	
ı	Screw 12x3/4	V12x34		33	49	49	58	66	74	86	98	
J	Screw 12x1-1/4	VHL12x114S		42	53	63	74	84	95	105	116	
К	Flat washer	FW10x34S		35	45	50	60	65	75	85	90	
L	Plastic spacer 0 .625"x 0.50"	SP0625X250		8	10	12	14	16	18	20	22	
*	Hardware bag/pool	SACV12X34-33		1								
*	Hardware bag/pool	SACV12X34-49			1	1						
*	Hardware bag/pool	SACV12X34-58					1					
*	Hardware bag/pool	SACV12X34-66						1				
*	Hardware bag/pool	SACV12X34-74							1			
*	Hardware bag/pool	SACV12X34-86								1		
*	Hardware bag/pool	SACV12X34-98									1	
**	Hardware bag/wall	1050000054		1	1	1	1	1	1	1	1	
***	Hardware bag/pool	SACVHL12114-42		1								
***	Hardware bag/pool	SACVHL12114-53			1						1	
***	Hardware bag/pool	SACVHL12114-63				1					1	
***	Hardware bag/pool	SACVHL12114-74					1					
***	Hardware bag/pool	SACVHL12114-84						1				
***	Hardware bag/pool	SACVHL12114-95							1			
***	Hardware bag/pool	SACVHL12114-105								1		
****	Hardware bag/pool	SACFW10X34S-35		1								
****	Hardware bag/pool	SACFW10X34S- 45			1							
****	Hardware bag/pool	SACFW10X34S- 50				1						
****	Hardware bag/pool	SACFW10X34S- 60					1					
****	Hardware bag/pool	SACFW10X34S- 65						1				
****	Hardware bag/pool	SACFW10X34S- 75							1			
****	Hardware bag/pool	SACFW10X34S- 85								1		
****	Hardware bag/pool	SACFW10X34S- 90			<u> </u>		<u> </u>		<u> </u>		1	
****	Bag of plastic spacers	SACSP625X250-8		1								
****	Bag of plastic spacers	SACSP625X250-10		4	1		<u> </u>		<u> </u>		1	
****	Bag of plastic spacers	SACSP625X250-12				1					1	
****	Bag of plastic spacers	SACSP625X250-14		1			1					
****	Bag of plastic spacers	SACSP625X250-16		1				1				
****	Bag of plastic spacers	SACSP625X250-18		1					1			
****	Bag of plastic spacers	SACSP625X250-20		1						1		
*****	Caps bag	SACCAPCH777-08		1								

Product Description :		Regency Round				Revised Sept 2017							
Produc	t Code :	PREGLX-54RSRRRRF41											
				Quantity required for installation (by pool size)									
Index#	Description	Part #	Length	12	15	18	21	24	27	30	33		
*****	Caps bag	SACCAPCH777-10			1								
*****	Caps bag	SACCAPCH777-12				1							
*****	Caps bag	SACCAPCH777-14					1						
*****	Caps bag	SACCAPCH777-16						1					
*****	Caps bag	SACCAPCH777-18							1				
*****	Caps bag	SACCAPCH777-20								1			
*****	Caps bag	SACCAPCH777-22									1		
	Thruss phill 18/8 bolts 18/8	99-0023		21	31	31	31	31	31	31	31		
	1/4-0x3/4			31									
	Flange nuts S/S 1/4-20	2505422		21	21	1 21	21	21	21	21	21		
	Serrated	2FGS422		31	31	31	31	31	31	31	31	1	
	DVD Installation	SACWBI36876		1	1	1	1	1	1	1	1		

^{*} In the hardware bag/pool you will find parts: #V12x34

^{**} In the hardware bag/wall you will find parts: #99-0023 $\,$ - $\,$ #2FGS422 $\,$

^{***} In the hardware bag/pool you will find parts: #VHL12114S

^{****} In the hardware bag/pool you will find parts: #FW10x34S

^{*****} In the bag of platic spacers you will find parts: #SP0625X0250

^{******} In the Cap bag you will find parts: #CAPCH777